



The Drummer's Drum.

PARTS CATALOGUE




Parallel Snare Action


Ⓐ			Ⓑ			Ⓒ		
①	74606579	eccenter axle complete	①	74606254	housing	③	84801854	knurled screw M6 x 4l
1a	84301513	cap nut M6	1a	74607200	nylon guide	3a	75705913	tension spring 7.2 dia.
1b	75900000	guide sleeve	1b	74607154	base	3b	84000313	rivet 7 dia.
1c	75900100	plastic roll 6 dia.	1c	84100512	cylinder screw M 5 x 25	3c	74606354	tuning block
②	74606474	axle 6 dia.	1d	84400212	lock washer 5.1 dia.	④	80103353	slotted screw M6 x 20
③	74607354	rod 8 x 8	1e	84500112	washer 5.3 dia.	4a	84401412	disc V 6
			1f	74601972	bolt	⑤	84500951	washer
			②	74601772	connecting rod	5a	84300512	nut M6
			2a	74601653	eccentric 22 dia.	5b	84301513	cap nut M6
			2b	75700610	pull spring 5 dia.		74606159	parallel snare action, complete
			2c	84900153	set ring 12 dia.			
			2d	84103212	cylinder screw M 4 x 6			
			2e	84103312	cylinder screw M 4 x 7			
			2f	84104512	slotted screw M 4 x 12			

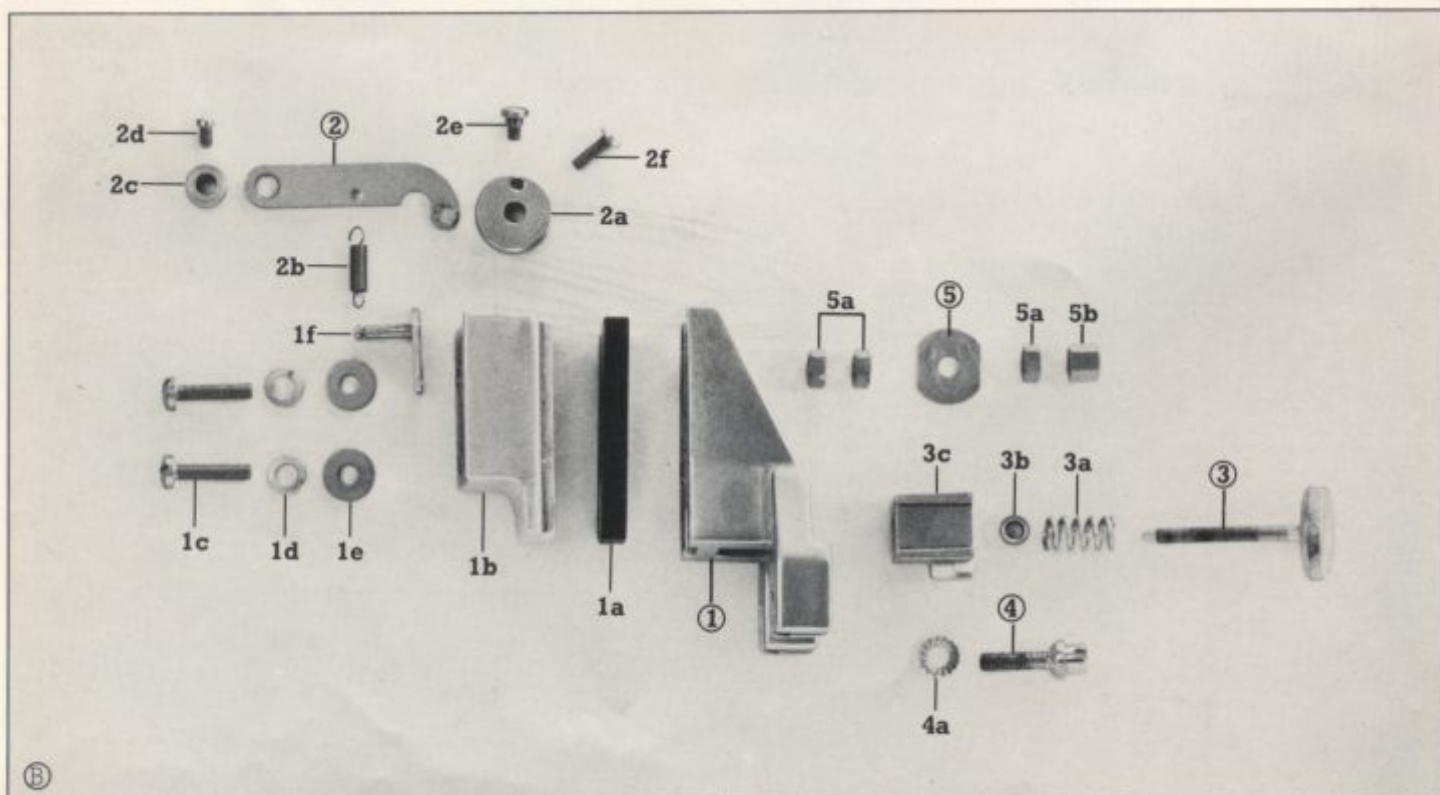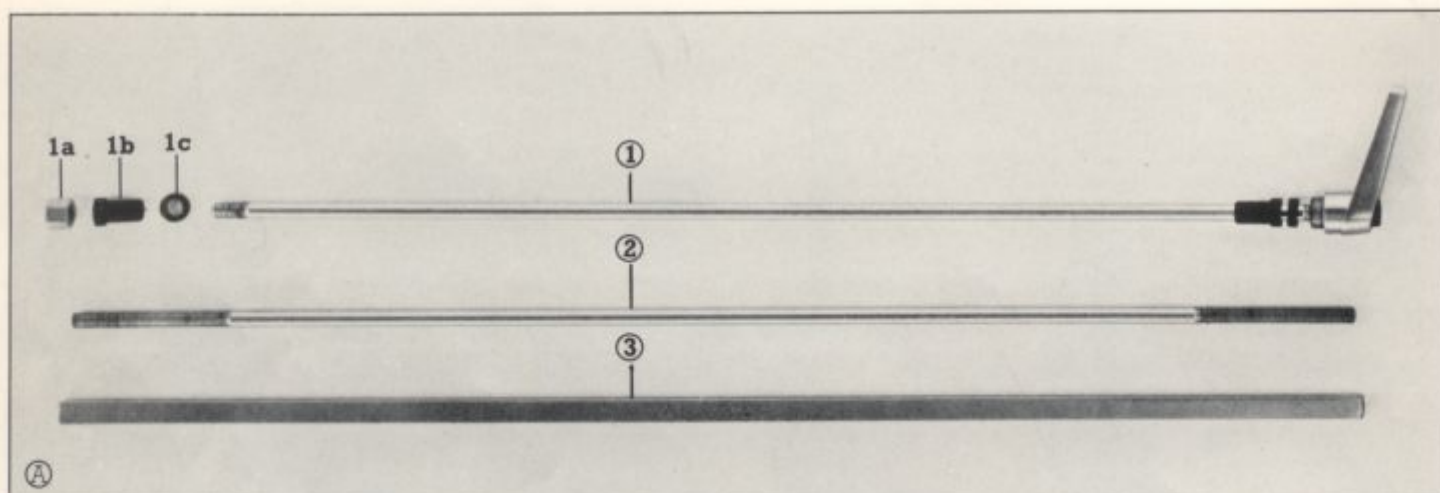

Snares

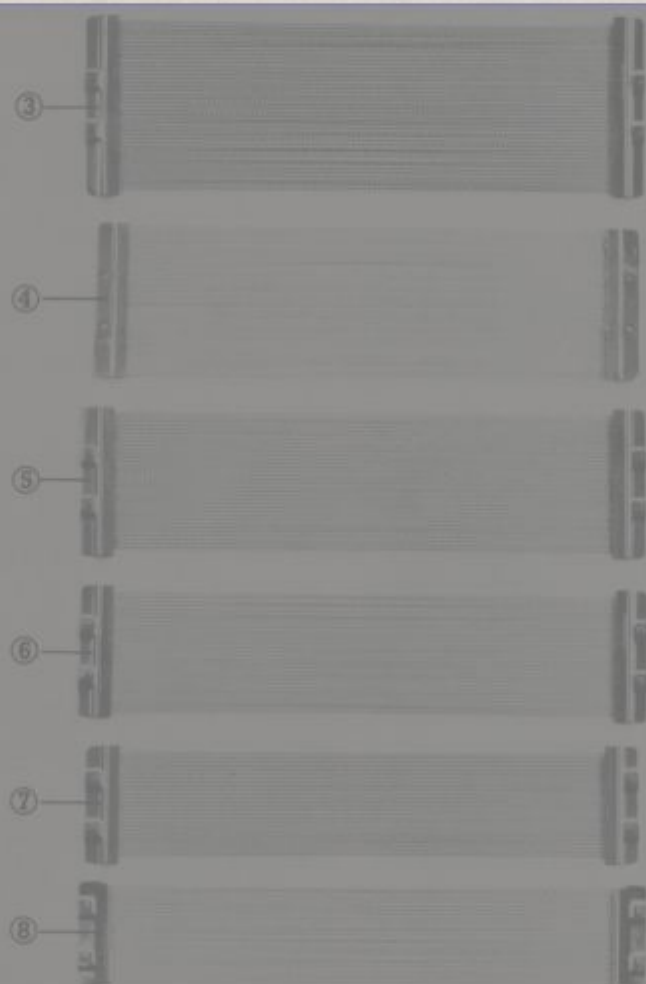


- ① 74705451 ROCK 22 strand heavy wire snares
- ② 74705251 JAZZ 24 strand thin wire snares
- ③ 74701851 42 strand wire snares
- ④ 74701751 38 strand wire snares
- ⑤ 74701651 34 strand wire snares
- ⑥ 74701551 30 strand wire snares
- ⑦ 74701451 26 strand wire snares
- ⑧ 74705151 24 strand wire snares

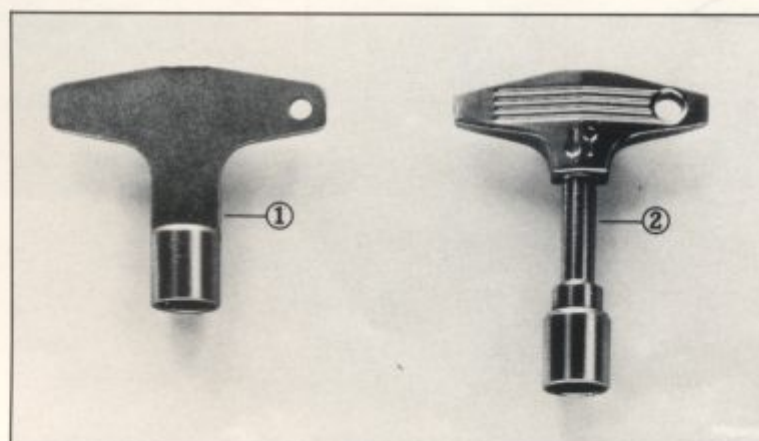


- ① 80501253 drum key
- ② 80500953 drum key


Drum Lugs

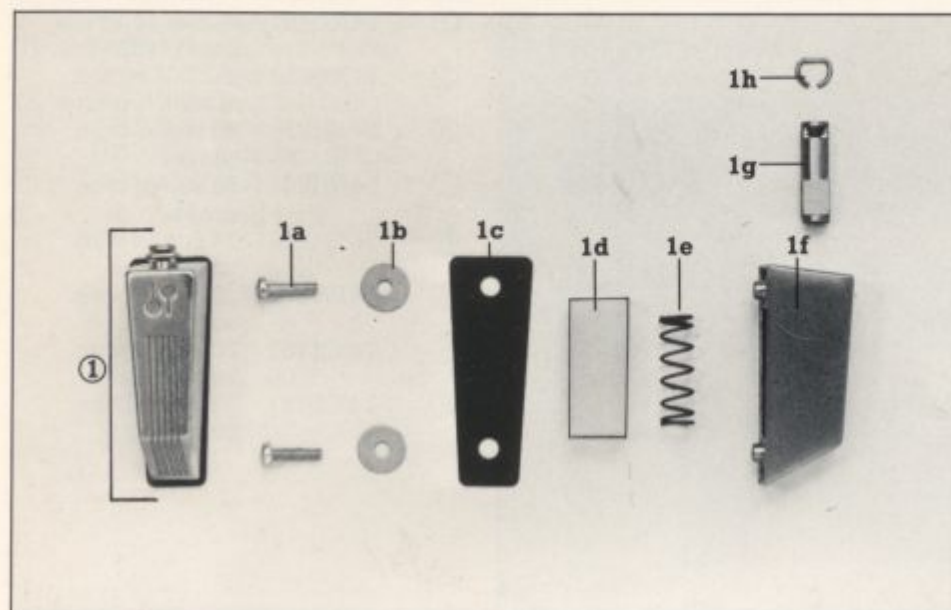

- ① 74104359 lug, complete
- 1a 84104612 slotted screw M 4 x 15
- 1b 84503012 washer 4.3 dia.
- 1c 75901210 fibre rest
- 1d 74505010 foam lug insert
- 1e 75703510 tension spring 10 dia.
- 1f 74102654 lug
- 1g 74506004 lug insert 1/4"
- 1h 74506113 snap-lock ring

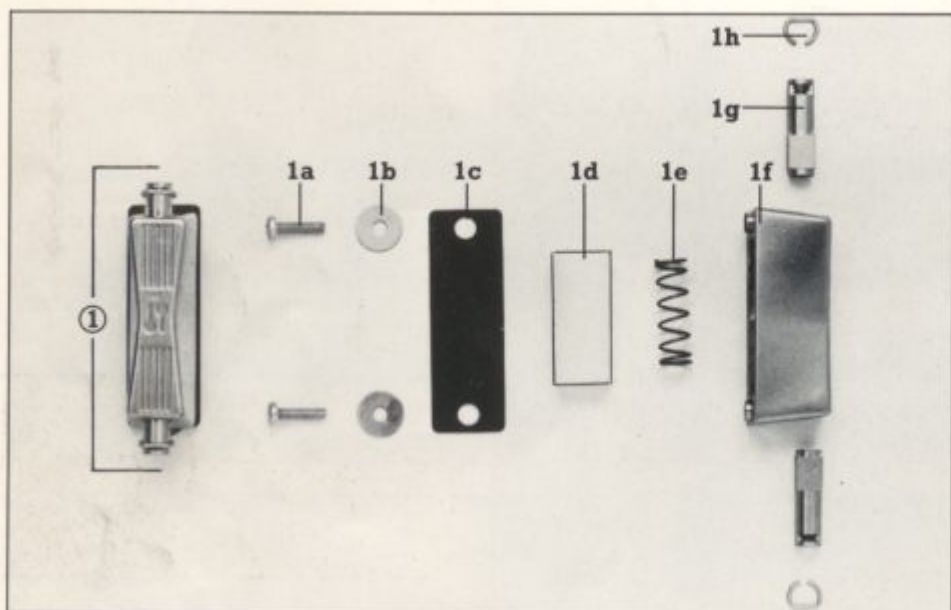

- ① 74105459 double lug, complete
- 1a 84104612 slotted screw M 4 x 15
- 1b 84503012 washer 4.3 dia.
- 1c 75901600 fibre rest
- 1d 74505010 foam lug insert
- 1e 75703510 tension spring 10 dia.
- 1f 74104154 lug
- 1g 74506004 lug insert 1/4"
- 1h 74506113 snap-lock ring

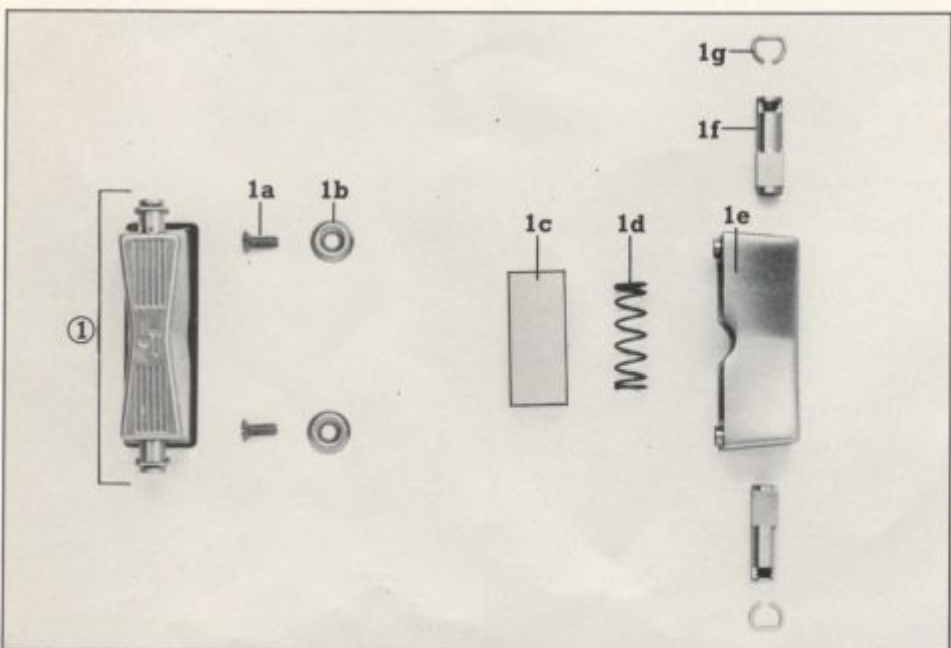

- ① 74104259 double lug complete
- 1a 84100912 screw M 4 x 10
- 1b 84500212 washer
- 1c 74505010 foam lug insert
- 1d 75703510 tension spring 10 dia.
- 1e 74102754 lug
- 1f 74506004 lug insert 1/4"
- 1g 74506113 snap-lock ring



Signature Series ferro manganese steel rims

72102774	6" rim, 4 rod
72102874	8" rim, 4 rod
72102974	10" rim, 5 rod
72100174	12" rim, 6 rod
72100274	13" rim, 6 rod
72100374	14" rim, 8 rod
72103074	15" rim, 8 rod
72100674	16" rim, 8 rod
72100774	18" rim, 9 rod
72103274	14" snare rim, top, 12 rod




Signature Series heavy duty die cast rims

72103654	14" snare rim, top
72103759	14" snare rim, bottom with snare guard (not illustr.)




72103754	14" snare rim, bottom, without snare guard
----------	--

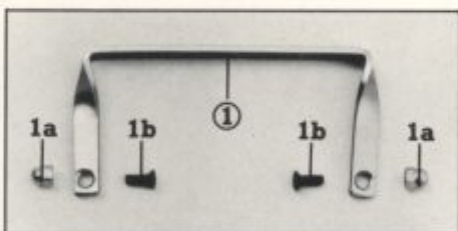

Snare guard

①	74509374	snare guard for bottom rim
1a	84304713	cap nut M3
1b	84106010	screw M3x8

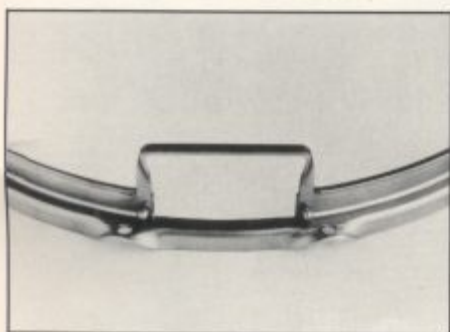

Signature Series snare drum rim, bottom

72103379	14" snare rim, bottom, with snare guard, 12 rod
----------	---

Phonic / Phonic Plus snare drum rim, bottom

72102173	14" snare rim, bottom, with snare guard, 10 rod
----------	---



Bass drum rims

Phonic / Phonic Plus bass drum rims

72102353	18" rim
72102453	20" rim
72102553	22" rim
72102653	24" rim


Signature Series bass drum rims

72102354	18" rim
72102454	20" rim
72102554	22" rim
72102654	24" rim




75802410	rubber anchor strip
----------	---------------------

Bass Drum Spurs

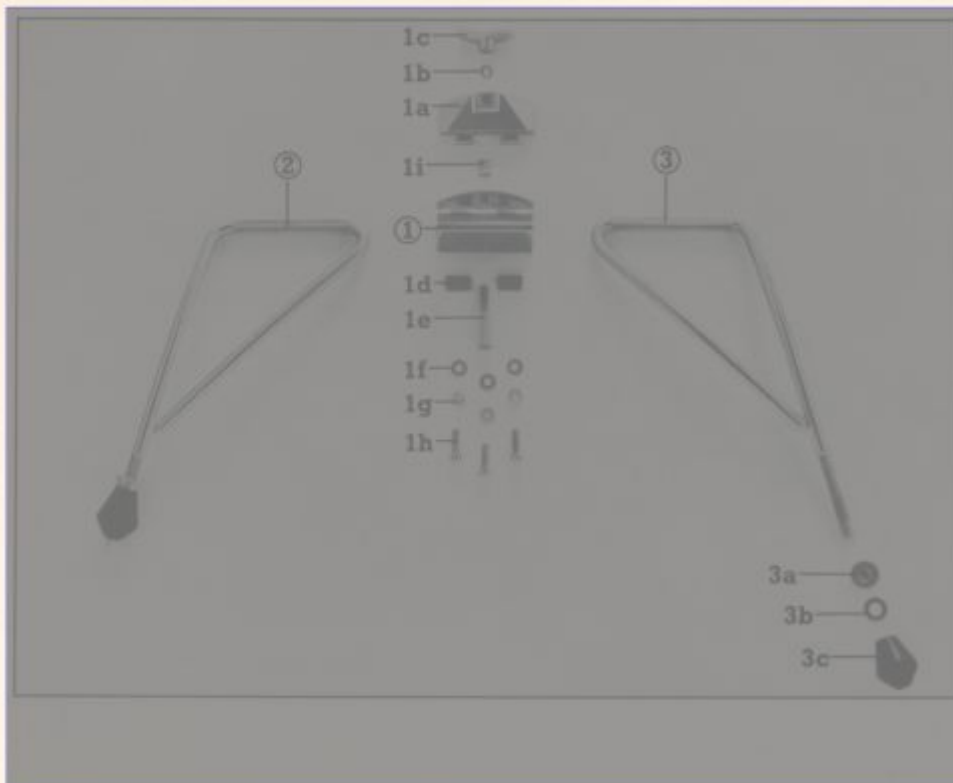

Phonic

11605501	Z 5060 right spur, complete, with prism clamp
11605601	Z 5061 left spur, complete, with prism clamp
① 74105153	prism lug, bottom
1a 74105253	prism lug, top
1b 84500512	washer 6.5 dia./9x1
1c 80205253	wing nut M6
1d 74808372	spacer
1e 84207053	hex screw M6 x 45
1f 84502512	washer 6.6 dia.
1g 84400312	lock washer 6.1 dia.
1h 84200212	cylinder screw M6 x 25
1i 75702110	tension spring 9.75 dia.
② 74504479	spur, left, complete
③ 74504579	spur, right, complete
3a 84304854	knurled nut M10 (until Feb. '82)
84306359	knurled nut M10 (new from Feb. '82)
3b 84401110	washer 10.4 dia.
3c 75806900	rubber foot M10

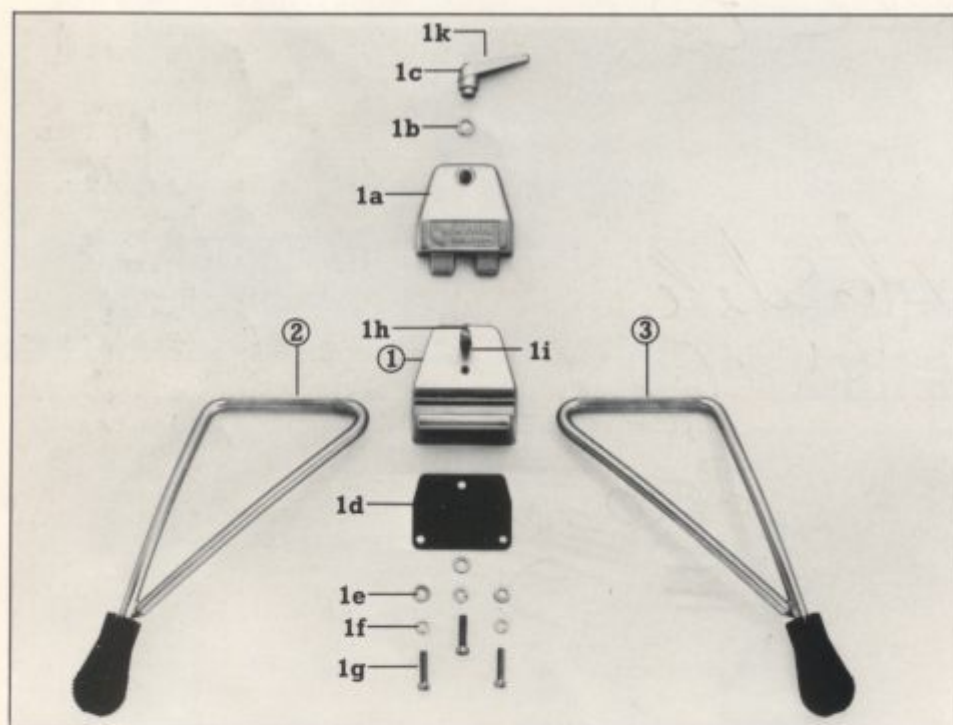


Signature Series Spurs

11605701	HLZ 5062 right spur, complete, with prism clamp
11605801	HLZ 5063 left spur, complete, with prism clamp
① 74104954	prism clamping device, bottom
1a 74105054	prism clamping device, top
1b 84501112	washer 9.3 dia.
1c 80205154	lever nut M8
80205159	lever nut with plug
1d 75901110	fibre rest
1e 84502512	washer 6.6 dia.
1f 84400312	lock washer 6.1 dia.
1g 84200212	cylinder screw M6 x 25
1h 84206212	cylinder screw M8 x 40
1i 84400412	lock washer 8.2 dia.
1k 75901010	plug
② 74507659	spur, left, complete
③ 74507559	spur, right, complete

Phonic Plus Spurs (not illustr.)


11606301	Z 5064 right spur, complete, with prism clamp	84400312	lock washer 6.1 dia.
11606401	Z 5065 left spur, complete, with prism clamp	84200212	cylinder screw M 6 x 25
74104953	prism clamping device, bottom	84206212	cylinder screw M 8 x 40
74105053	prism clamping device, top	84400412	lock washer 8.2 dia.
84501112	washer 9.3 dia.	74504479	left spur, complete
80206853	wing nut M8	74504579	right spur, complete
84502512	washer 6.1 dia.	84306353	knurled nut M 10
		84401110	washer 10.4 dia.
		75902100	rubber foot M10

Floor Tom Legs

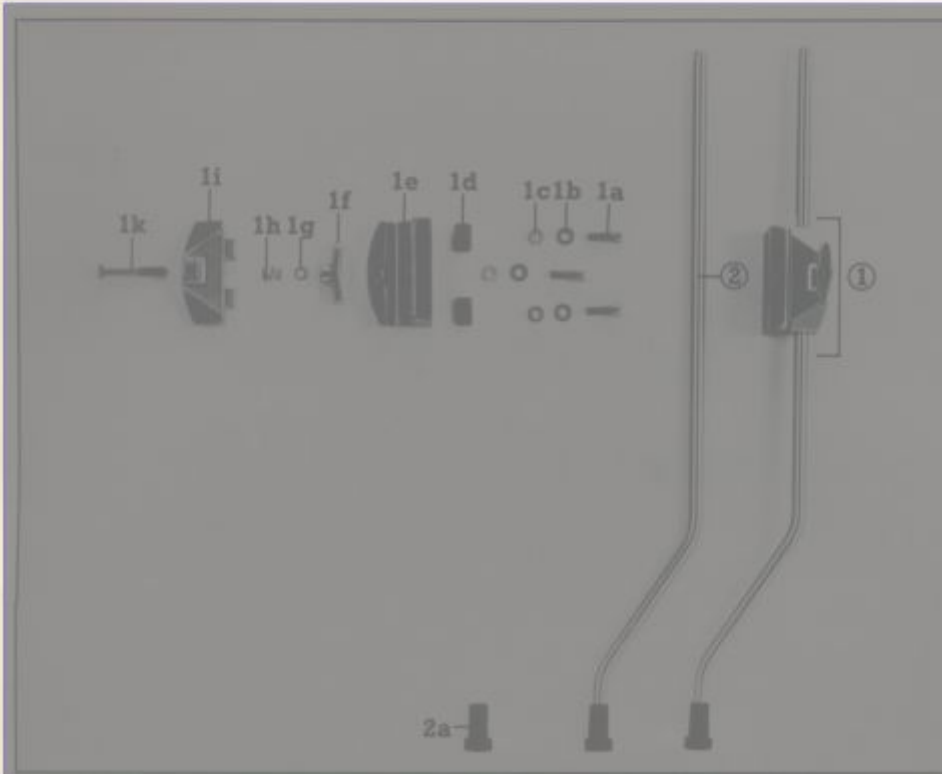

Phonic/PhonicPlus Floor Tom Legs


①	74105159	prism lug, complete
1a	84200212	cylinder screw M6x25
1b	84502512	washer 6.6 dia.
1c	84400312	lock washer 6.1 dia.
1d	74508372	spacer
1e	74105153	prism lug, bottom
1f	80205253	wing nut M6
1g	84500512	washer 6.5 dia./9x1
1h	75702110	tension spring 9.75 dia.
1i	74105253	prism lug, top
1k	84207053	hex screw M6x45
②	74502179	leg, complete
2a	75804000	rubber foot

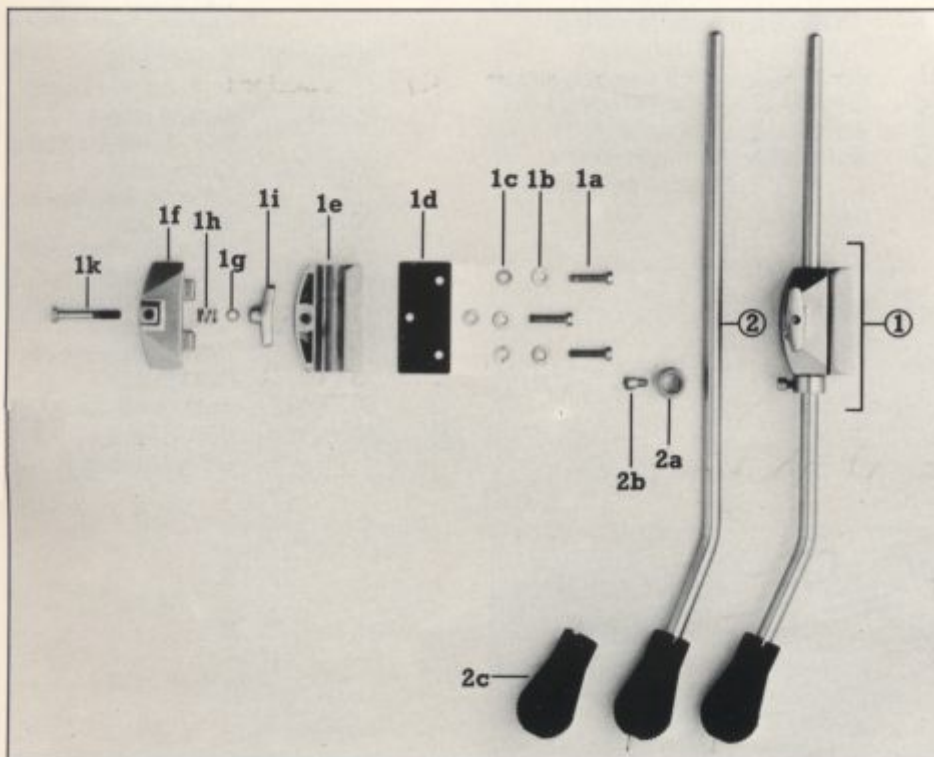


Signature Series Floor Tom Legs

①	74105359	prism lug, complete
1a	84200212	cylinder screw M 6x25
1b	84502512	washer 6.6 dia.
1c	84400312	lock washer 6.1 dia.
1d	75901500	fibre rest
1e	74105154	prism lug, bottom
1f	74105254	prism lug, top
1g	84500512	washer 6.5 dia.
1h	75702110	tension spring 9.75 dia.
1i	80205254	wing nut M 6
1k	84207054	hex screw M 6 x 45
②	74507754	leg, complete
2a	74507854	ring 12.3 dia.
2b	80206354	slotted screw M 6x9
2c	75809600	rubber foot


Drum Mounts, Screws

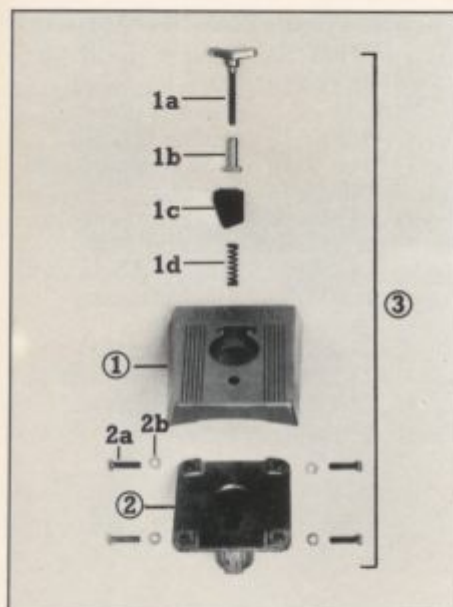


- ① 74103954 shell mount, top
- 1a 80205754 wing screw M 6 x 50
- 1b 74507054 threaded insert M 6 x 34
- 1c 75803200 wedge
- 1d 75704510 tension spring, 9.75 dia.
- ② 74103800 shell mount, bottom
- 2a 84200212 cylinder screw M 6 x 25
- 2b 84400312 lock washer 6.1 dia.
- ③ 11604001 bass drum mount, complete Z 5511a

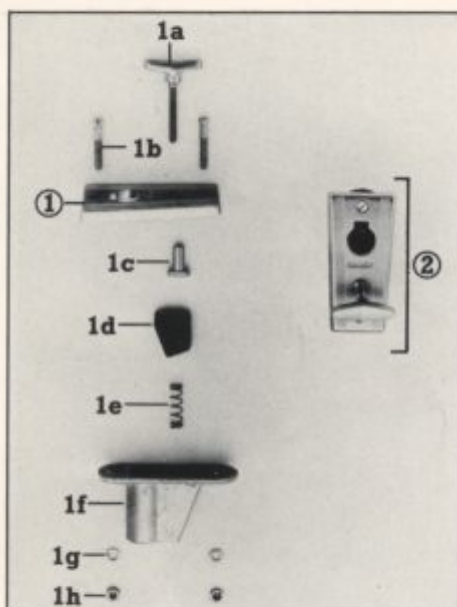

- ① 74104054 shell mount top plate
- 1a 80205954 wing screw M 6 x 45
- 1b 84203453 liko screw M 6 x 35
- 1c 74502854 threaded insert
- 1d 75803200 wedge
- 1e 75703510 tension spring 10 dia.
- 1f 74103051 shell mount housing
- 1g 84400312 lock washer 6.1 dia.
- 1h 84300512 hex nut M 6
- ② 11604201 tom tom mount, complete Z 5511c

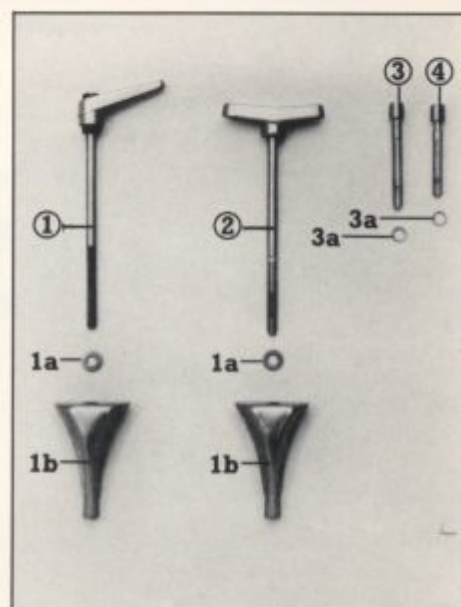


- ① 80102959 lever screw 1/4" x 120 (snap lock)
- 1a 84500412 washer 6.4 dia.
- 1b 74200154 claw hook
- ② 80102754 tension screw 1/4" x 120 (snap lock)
- 80100153 slotted screw 1/4" x 35 (not illustr.)
- 80100253 slotted screw 1/4" x 46 (not illustr.)
- 80100353 slotted screw 1/4" x 55 (not illustr.)
- 80102354 slotted screw 1/4" x 35 (snap lock)
- ③ 80102554 slotted screw 1/4" x 55 (snap lock)
- 80103153 slotted screw 1/4" x 70 (snap lock) (not illustr.)
- 3a 84500512 washer 6.5 dia.
- ④ 80102454 slotted screw 1/4" x 46 (snap lock)

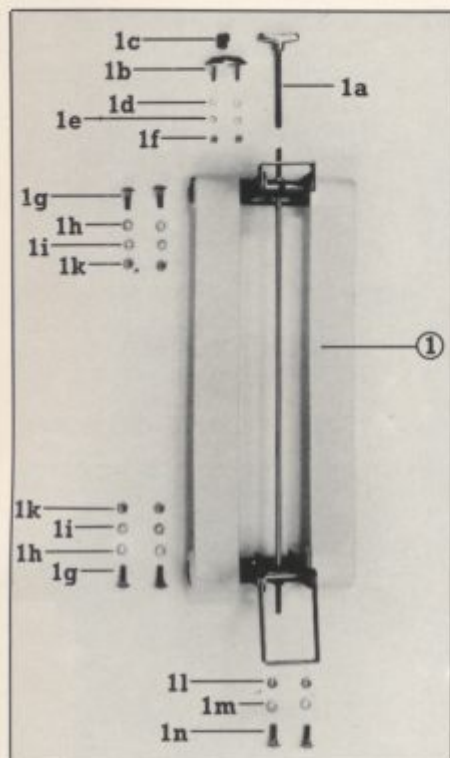



Bass Drum Mufflers

- ① 11602001 muffler, complete for HLG 18 heavy, G3018 Z 5105
- 11602101 muffler, complete for HLG 20 heavy, G3020 Z 5106
- 11602201 muffler, complete for HLG 22 heavy, G3022 Z 5107
- 11602301 muffler, complete for HLG 24 heavy, G3024 Z 5108
- 11608001 muffler, complete for HLG 18 light Z 5115
- 11608101 muffler, complete for HLG 20 light Z 5116
- 11608201 muffler, complete for HLG 22 light Z 5117
- 11608301 muffler, complete for HLG 24 light Z 5118
- 1a 80103054 wing screw M6x80
- 1b 74800654 shell mount
- 1c 74802210 guiding bush
- 1d 84500312 washer 4.3 dia.
- 1e 84400112 lock washer 4.1 dia.
- 1f 84301112 hex nut M 4
- 1g 84200454 flat round screw M6x20
- 1h 84500412 washer 6.4 dia.
- 1i 84400312 lock washer 6.1 dia.
- 1k 84300512 hex nut M 6
- 1l 84300412 nut M 6
- 1m 84500912 washer 6.5 dia.
- 1n 84206054 flat round screw M6x20

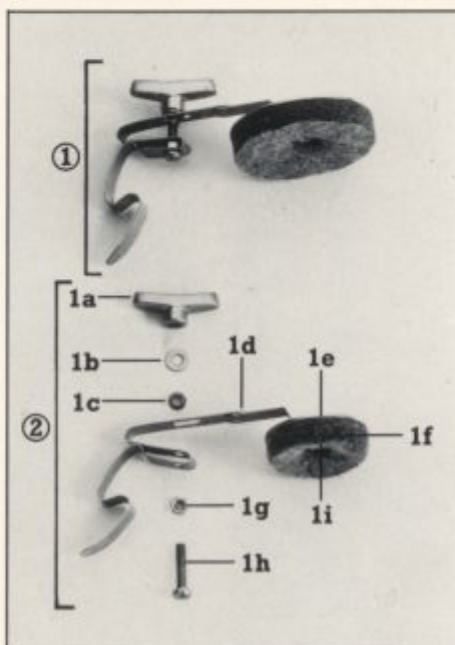

External mufflers

- ① 11602701 external muffler Z 5112
- ② 11602601 external muffler Z 5111
- 1a 80205854 wing nut M 5
- 1b 84500112 washer 5.3 dia.
- 1c 84001012 rivet 6 dia.
- 1d 74802853 muffler spring band
- 1e 74802673 washer 50 dia. for Z 5111
- 74802773 washer 70 dia. for Z 5112
- 1f 74802500 felt washer 50 dia. for Z 5111
- 74800100 felt washer 70 dia. for Z 5112
- 1g 84300312 nut M 5
- 1h 84102412 cylinder screw M 5x25
- 1i 84501212 washer 5.2 dia.
- 1j 84000510 rivet 5 dia.

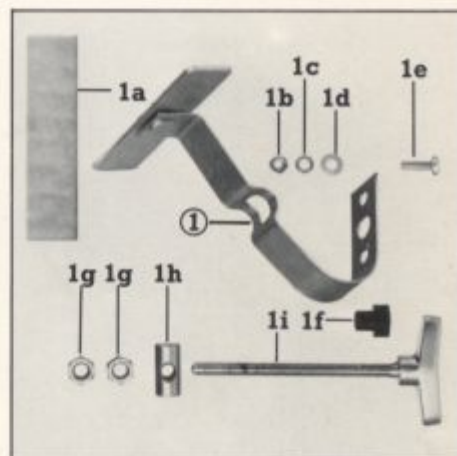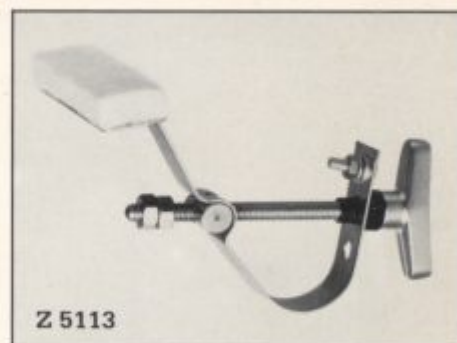

Signature Series Internal Mufflers


- 11603501 internal muffler Z 5113, complete
- ① 74800559 bow spring
- 1a 74804010 felt washer
- 1b 84301112 nut M 4
- 1c 84400112 lock washer 4.1 dia.
- 1d 84500312 washer 4.3 dia.
- 1e 84104612 phillips screw M 4x15
- 1f 74802210 guide sleeve
- 1g 84300512 nut M 6
- 1h 74801452 roller
- 1i 80103054 wing screw M 6




Internal Mufflers

- 11602501 internal muffler Z 5104, complete
- 11602410 internal muffler Z 5110, complete
- 74800500 bow spring
- 74800100 felt washer 70 dia. for Z 5104
- 74802500 felt washer 50 dia. for Z 5110
- 74800471 fibre washer 70 dia. for Z 5104
- 74800371 fibre washer 50 dia. for Z 5110
- 80103054 wing screw M6x80
- 74802210 guiding bush
- 84104612 slotted screw M4x15
- 84500312 washer 4.3 dia.
- 84400112 lock washer 4.1 dia.
- 84301112 nut M 4
- 84300512 nut M 6
- 74801452 roller with thread
- 84000510 rivet 5 dia. x 12

Signature Series Bass Drum Pedal HLZ 5380

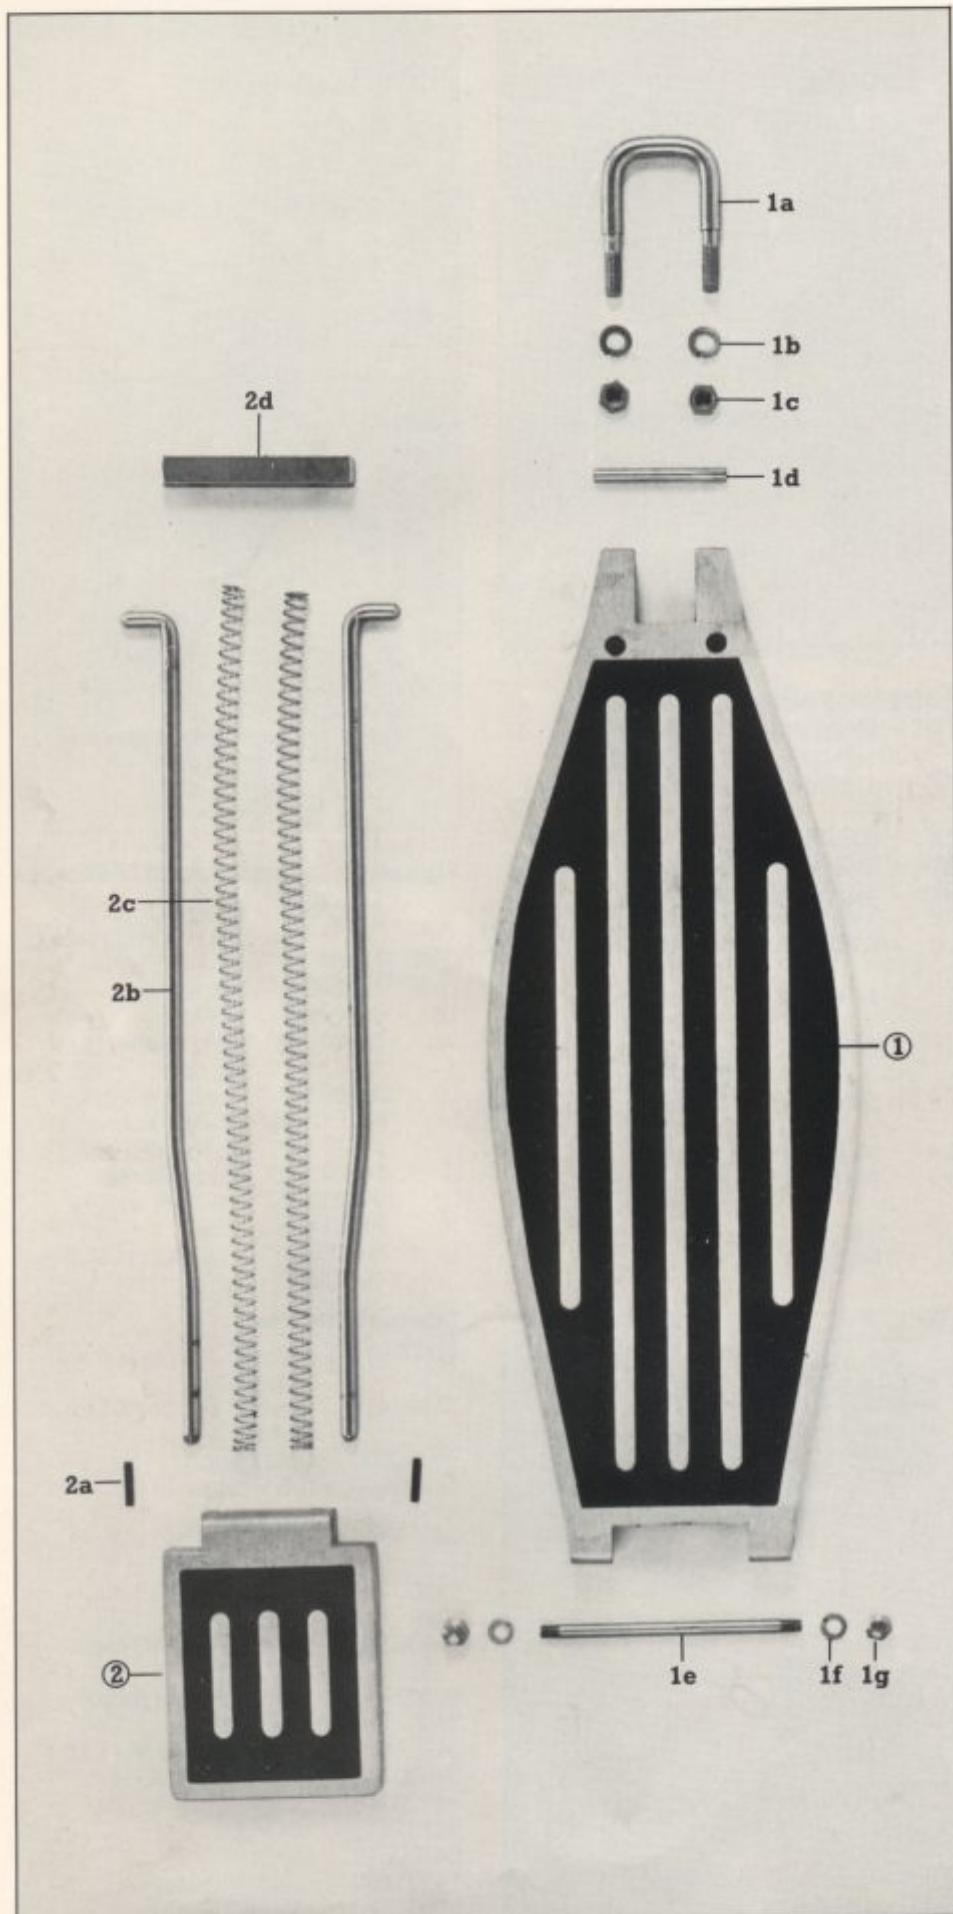


- ① 75306051 foot plate
- 1a 75406753 toe stop
- 1b 84400212 lock washer 5.1 dia.
- 1c 84300312 nut M5
- 1d 84703112 notched pin
- 1e 80201312 special screw M4x72
- 1f 84400112 lock washer 4.1 dia.
- 1g 84301713 cap nut M4
- ② 75306359 heel plate, compl. with struts
- 2a 84705010 notched pin 2 dia.
- 2b 75209474 strut 5 dia.
- 2c 75704810 tension spring 5.3 dia.
- 2d 75004274 lockbar for struts

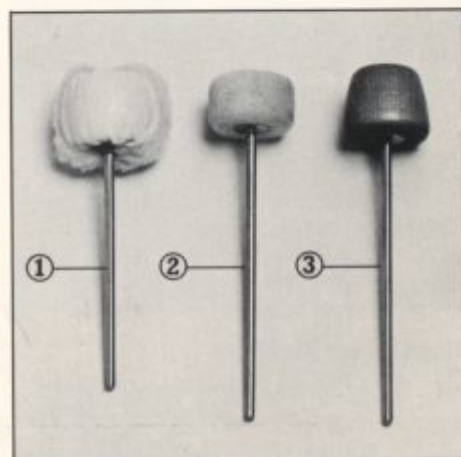


- ① 11605101 Sch 21 wool and leather beater
- ② 11605001 Sch 20 felt beater
- ③ 11605301 Sch 24 wood beater


Signature Series Bass Drum Pedal HLZ 5380

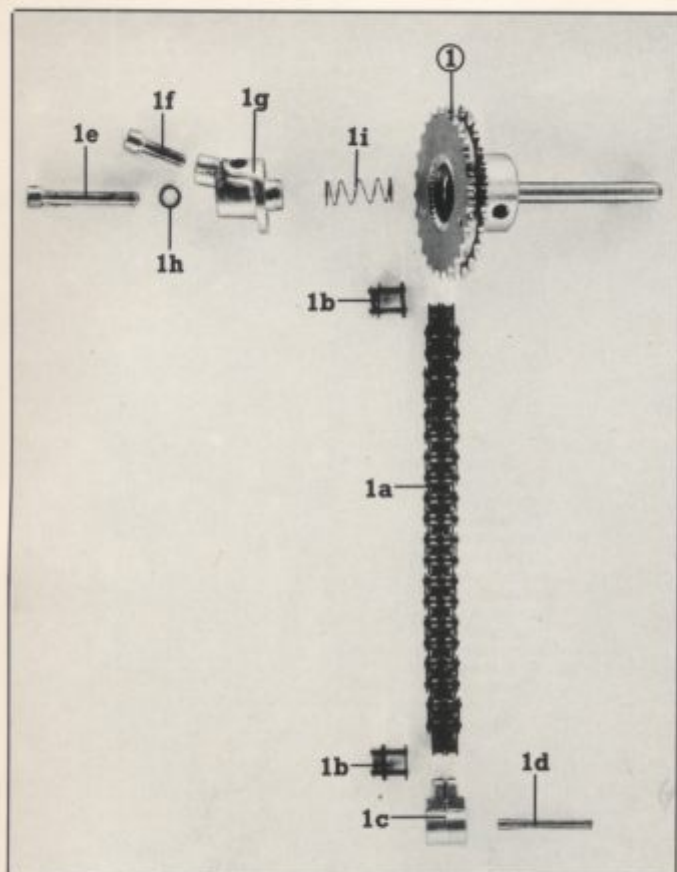

①	75005259	sprocket with axle	1f	80200353	slotted screw
1a	75003400	steel chain	1g	75301251	beater holder
1b	75004100	chain lock	1h	84500512	washer 6.5 dia.
1c	75003554	foot plate holder	1i	75701012	tension spring
1d	84703112	notched pin 4 dia.			10 dia.
1e	80200453	slotted screw			
		M6x40			

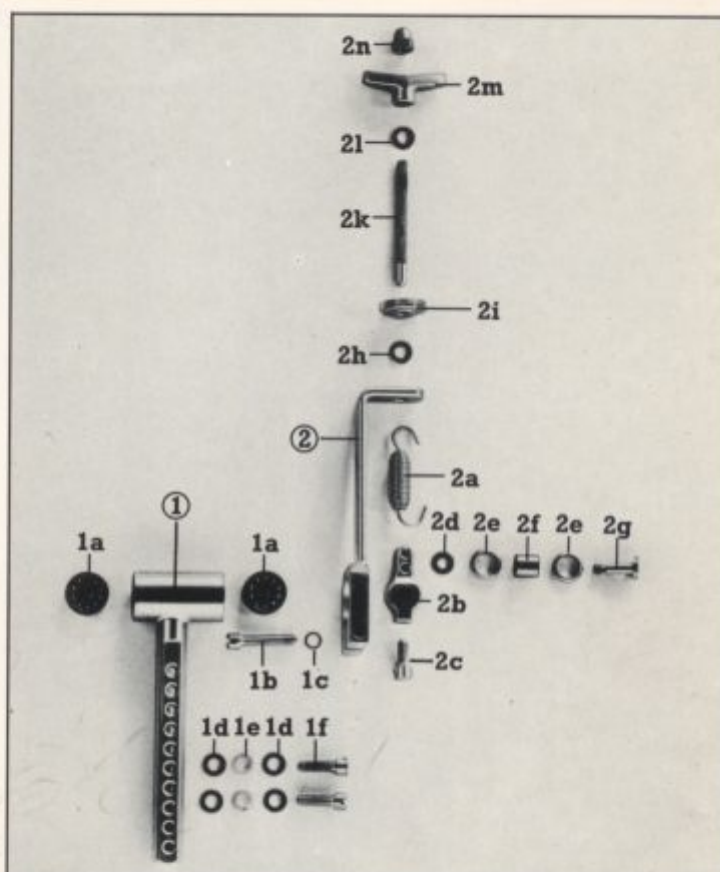


①	75003774	pillar	2a	75700412	spring holder
1a	84900800	roller bearing 8 dia.	2b	75302454	spring 11 dia.
1b	80203753	slotted screw	2c	80200153	connecting rod
		M 6x30			slotted screw
1c	84500512	washer 6.5 dia.			M 6x15
1d	84500412	washer 6.4 dia.	2d	84500112	washer 5.3 dia.
1e	84400312	lock washer 6.1 dia.	2e	75505853	spacer 16 dia.
1f	80200353	slotted screw	2f	84900900	roller bearing 6 dia.
		M 6x20	2g	84103713	liko screw M 5x13
②	75005174	spring holder	2h	84500412	washer 6.4 dia.
2a	75700412	spring 11 dia.	2i	84303054	knurled nut M 6
2b	75302454	connecting rod	2k	75503453	tension bolt
2c	80200153	slotted screw	2l	84400810	lock washer 6.5 dia.
		M 6x15	2m	80205254	wing nut M 6
2d	84500112	washer 5.3 dia.	2n	84301513	cap nut M 6
2e	75505853	spacer 16 dia.			
2f	84900900	roller bearing 6 dia.			
2g	84103713	liko screw M 5x13			
2h	84500412	washer 6.4 dia.			
2i	84303054	knurled nut M 6			
2k	75503453	tension bolt			
2l	84400810	lock washer 6.5 dia.			
2m	80205254	wing nut M 6			
2n	84301513	cap nut M 6			

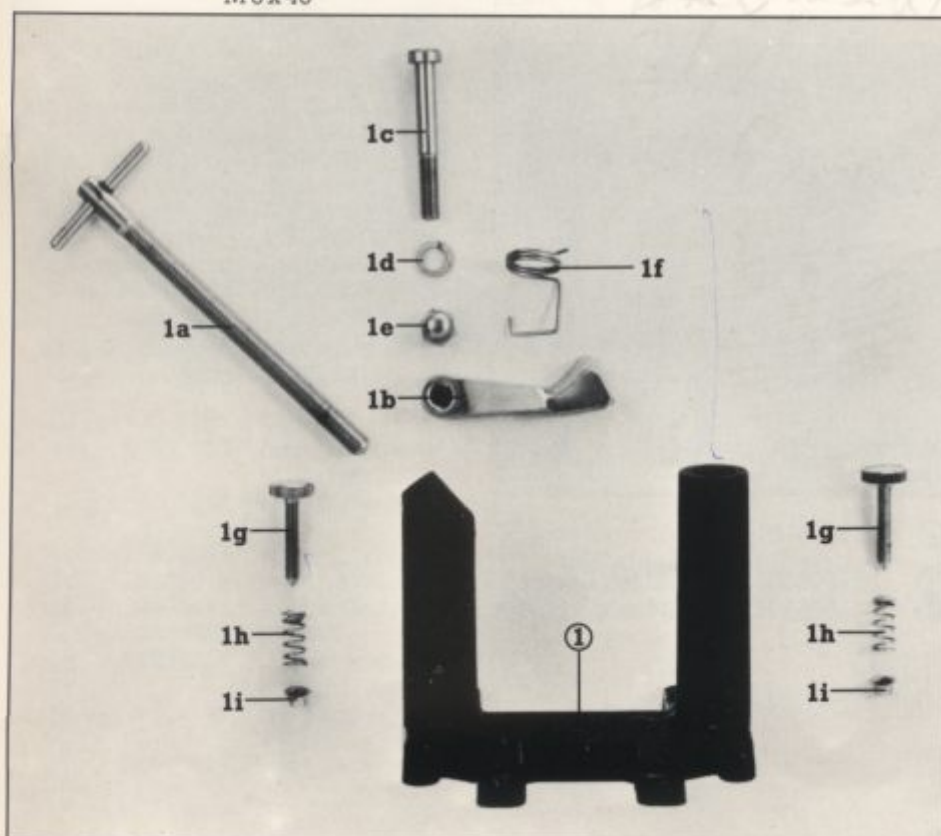

①	75306559	base	1g	84801254	knurled screw
1a	80203053	clamp screw			M 6x30
1b	75304254	clamp lever	1h	75704112	tension spring
1c	84205913	clamp lever screw			7.2 dia.
		M 8x60	1i	84000313	rivet 7x0.4x5
1d	84400412	lock washer 8.2 dia.			
1e	84304913	cap nut M 8			
1f	75703810	clamp lever spring			
1g	84801254	knurled screw			
		M 6x30			
1h	75704112	tension spring			
		7.2 dia.			
1i	84000313	rivet 7x0.4x5			

Signature Series Hi Hat Stand HLZ 5480


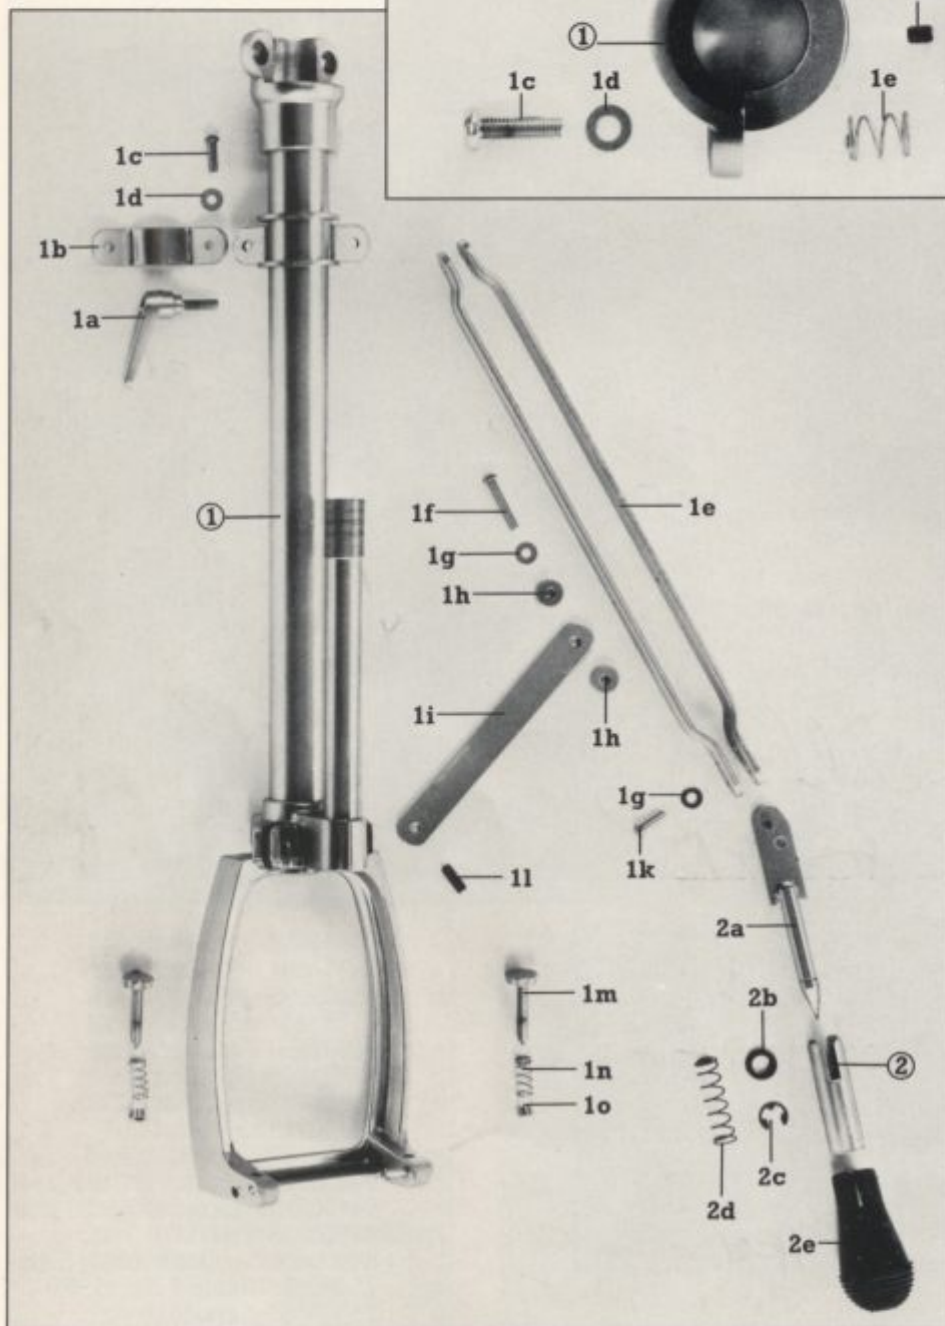


①	75000854	clamp 32 dia.
1a	84206713	cylinder screw M 8x30
1b	84400412	lock washer 8.2 dia.
1c	84206613	flat headed screw M 6x22
1d	84500412	washer 6.4 dia.
1e	75702210	tension spring 12 dia.
1f	84003810	notched bolt 4 dia.x8
1g	75809300	clamp bushing 29 dia.
1h	75001054	bow 32 dia.
1i	84501112	washer 9.3 dia.
1k	80205154	lever nut M 8
1l	75901010	plug


①	75306459	base, complete	1l	84003312	notched pin
1a	80205554	lever screw M 6x20	1m	84801254	knurled screw M6x35
1b	75208174	bracket without hole	1n	75704112	tension spring
1c	84002610	rivet 5 dia.x21.5	1o	84000313	rivet 7 dia.
1d	84500112	washer 5.3 dia.	②	75509554	tube
1e	75208974	long strut	2a	75208474	strut 20x5x55 with spur
1f	84002610	rivet 5 dia.x21.5	2b	75809500	washer
1g	84503112	washer 5.3 dia.	2c	84503310	disc
1h	84503213	spacer	2d	75704610	tension spring 10.5 dia.
1i	75209074	short strut		84002810	rivet 5 dia.
1k	84003510	rivet 5 dia.x 19.5	2e	75809600	rubber foot

Signature Series Hi Hat Stand HLZ 5480

- ① 75003159 clutch, complete
- 1a 75003154 clutch housing
- 1b 84801454 knurled screw M10x1x22
- 1c 75801310 felt washer
- 1d 75502554 clutch stem
- 1e 75002800 clamping plate 20x1.5
- 1f 75002904 clamp roll
- 1g 75702210 tension spring 12 dia.
- 1h 75003000 see-thru disc

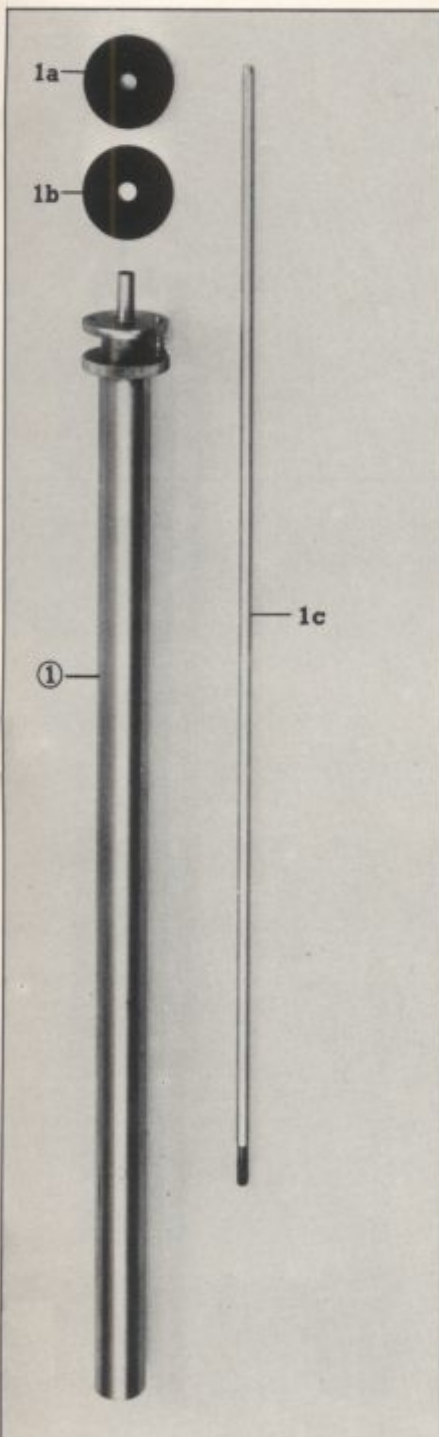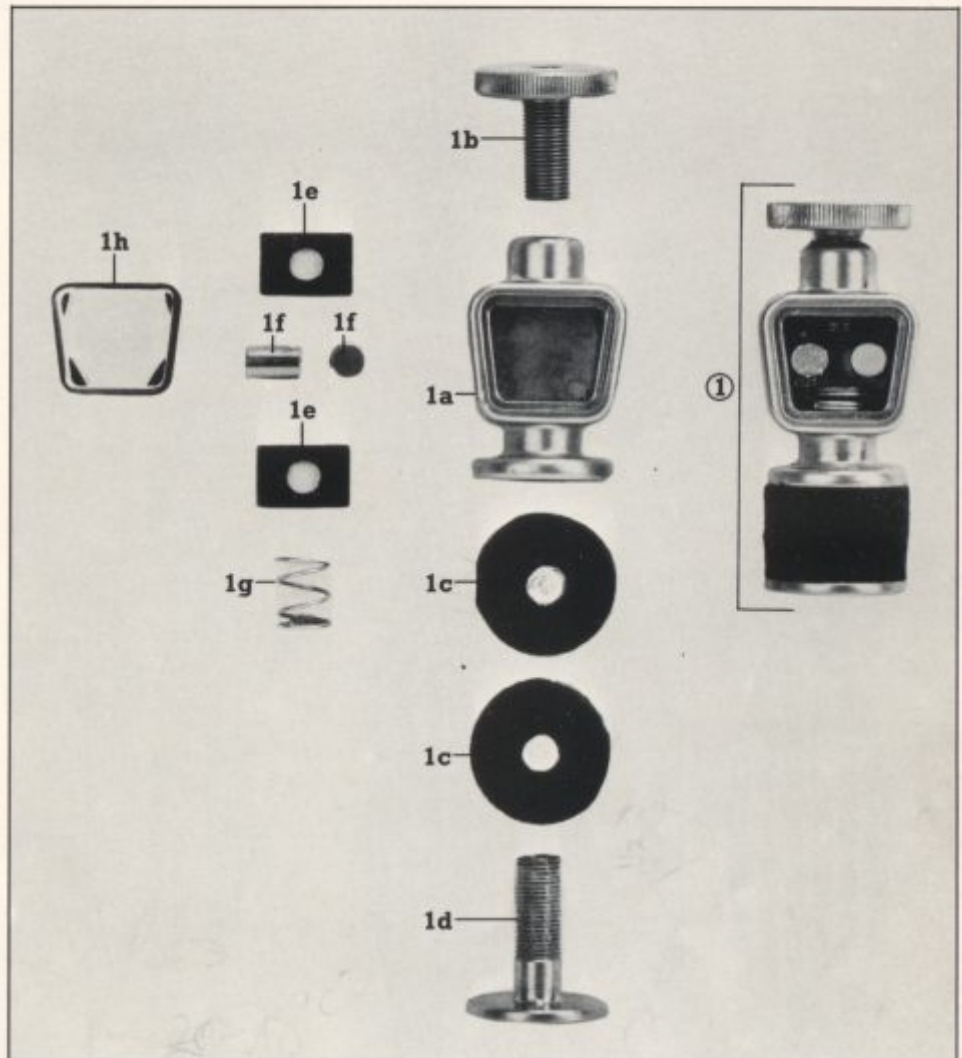


- ① 75002254 cymbal rest
- 1a 75002754 pin 4.8 dia.
- 1b 75702012 tension spring 6 dia.
- 1c 84501610 disc
- 1d 75901300 fibre washer
- 1e 75002600 nylon bushing 13 dia.
- 1f 84305754 knurled nut
- 1g 75002554 thread M27

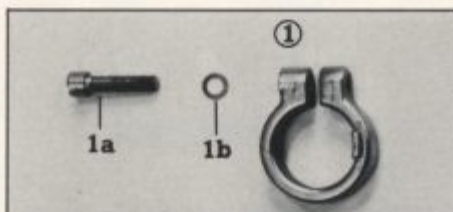


- ① 75001354 fix clamp 29 dia.
- 1a 80200253 slotted screw M6x25
- 1b 84500512 washer 6.5 dia.

- ① 75106759 top tube, complete
- 1a 75801500 felt washer 50 dia.
- 1b 75401971 fibre washer 50 dia.
- 1c 75209651 top rod

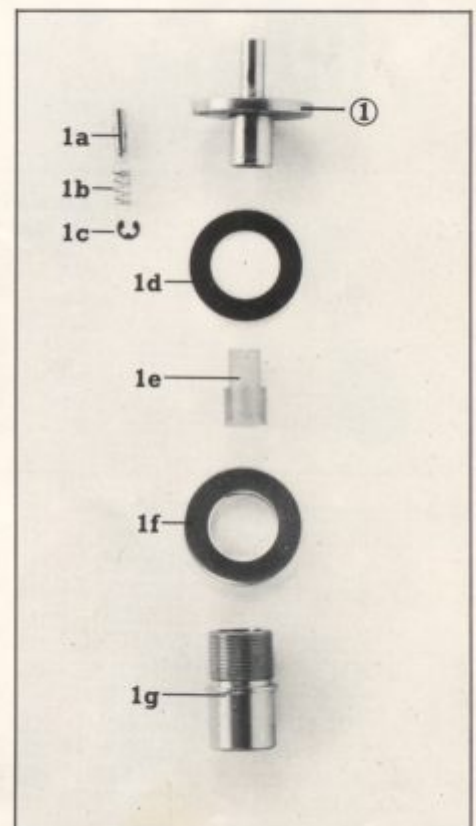

Hi Hat Foot Plates

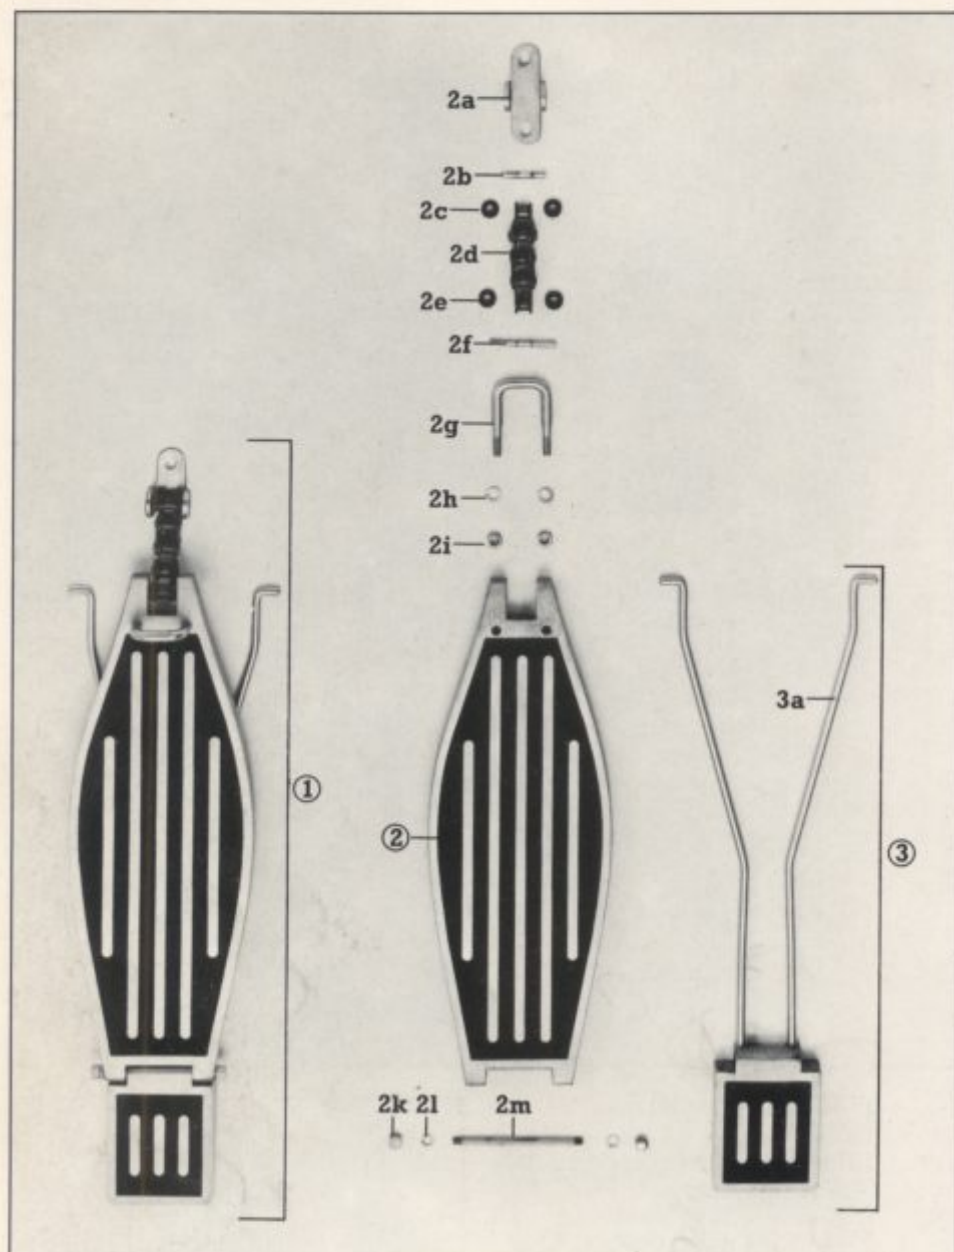


Foot Plate for Signature Series Hi Hat Stand



①	75306059	foot plate complete
②	75306051	foot plate
2a	75407174	pull
2b	84702212	notched pin 4 dia.
2c	75900610	spacer 4.5 dia.
2d	75002059	steel chain, complete
2e	75900710	spacer 4.5 dia.
2f	84703112	notched pin 4 dia.
2g	75406753	toe stop
2h	84400212	lock washer 5.1 dia.
2i	84300312	nut M5
2k	84301713	cap nut M4
2l	84400112	lock washer 4.1 dia.
2m	80201312	screw M4 x 72
③	75306159	heel plate, complete
3a	75209774	strut for heel plate

Foot Plate for Phonic Plus Hi Hat Stand

①	75307151	foot plate
1a	75406753	toe stop
1b	84400212	lock washer 5.1 dia.
1c	84300312	hex nut M5
1d	75504110	bushing 4.2 dia.
1e	75404153	metal strap
1f	84702212	notched pin 4 dia. x 24
1g	84703112	notched pin 4 dia. x 36
1h	84400112	lock washer 4.1 dia.
1i	84301713	cap nut M4
1k	80201312	special screw 4 dia. x 72
②	75306959	heel plate, complete with struts f. Z 5470
	75307059	heel plate, complete with struts f. Z 5474
2a	75204873	strut for Z 5470
	75209774	strut for Z 5474
2b	84705010	notched pin 2 dia. x 12

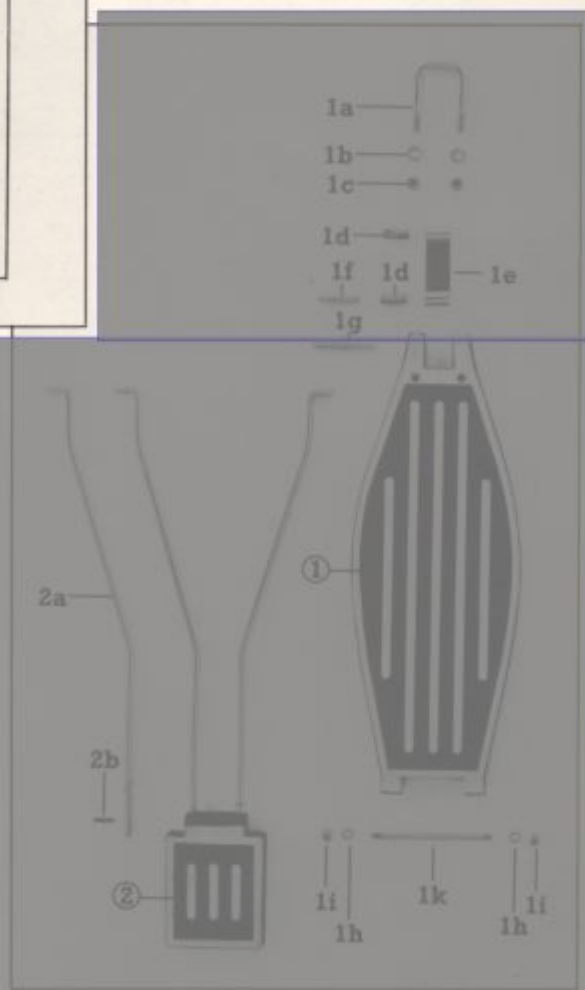





Signature Series Cymbal Stand HLZ 5280

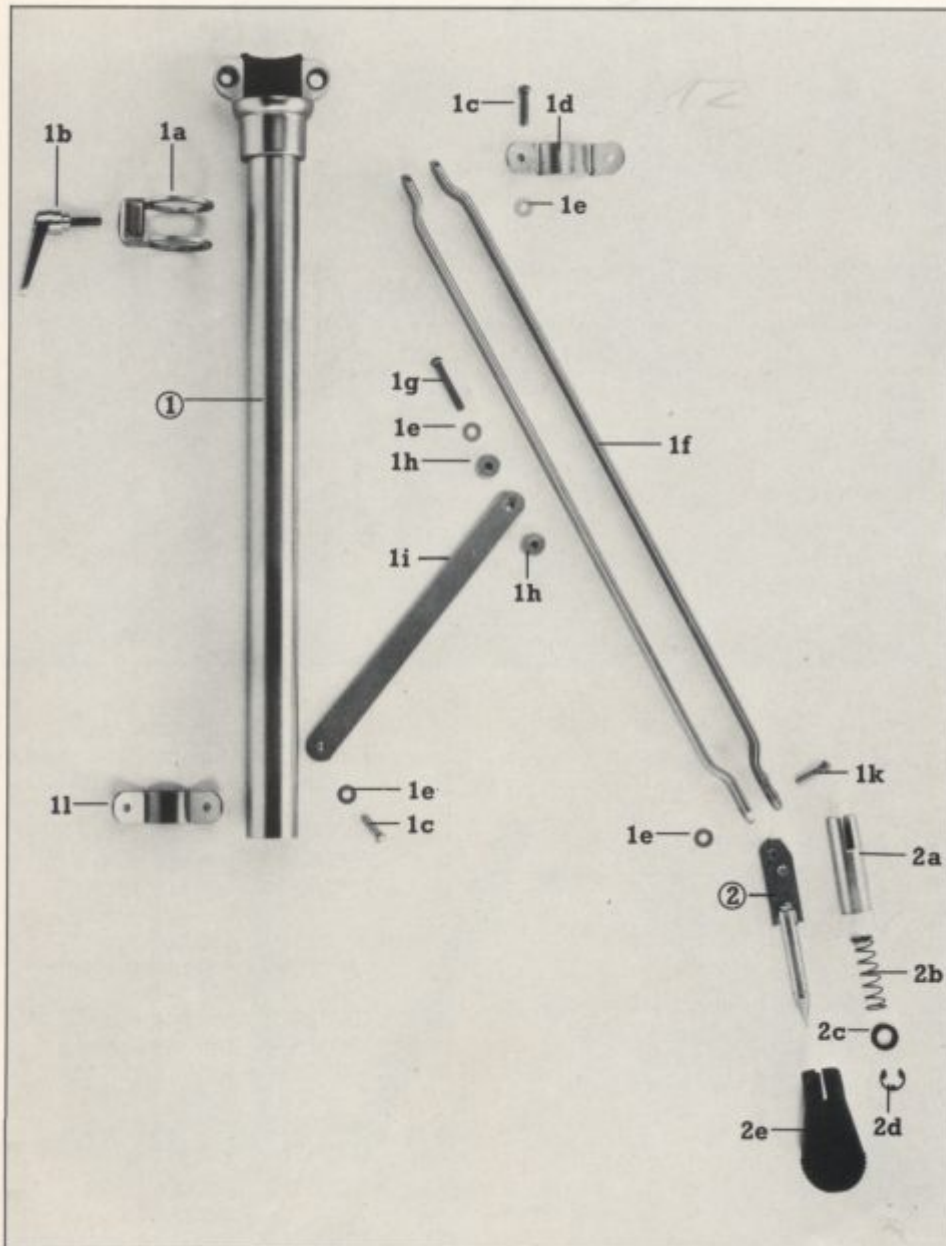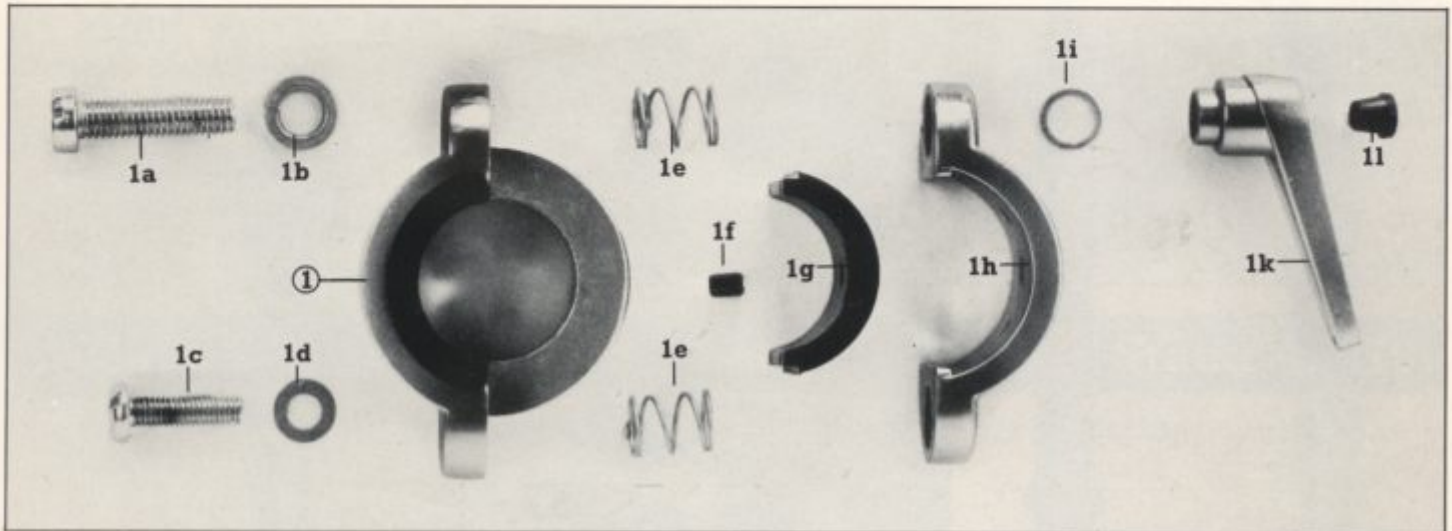

①	75000854	clamp 32 dia.
1a	84206713	cylinder screw M8x30
1b	84400412	lock washer 8.2 dia.
1c	84206613	flat headed screw M6x22
1d	84500412	washer 6.4 dia.
1e	75702210	tension spring 12 dia.
1f	84003810	notched bolt 4x8 dia.
1g	75809300	clamp bushing 29 dia.
1h	75001054	bow 32 dia.
1i	84501112	washer 9.3 dia.
1k	80205154	lever nut M8
1l	75901010	plug

①	75106059	tube 32 dia.
1a	75208374	clamping device
1b	80205554	lever screw M6x20
1c	84002610	rivet 5 dia. x21.5
1d	75208174	bracket without hole
1e	84500112	washer 5.3 dia.
1f	75207774	long strut
1g	84002810	rivet 5 dia. x33
1h	84503213	spacer
1i	75207874	short strut
1k	84003510	rivet 5 dia. x19.5
1l	75208074	bracket with hole
②	75208474	strut
2a	75509554	tube
2b	75704610	tension spring 10.5 dia.
2c	75809500	washer
2d	84503310	disc
2e	75809600	rubber foot

Signature Series Cymbal Stand Z 5280

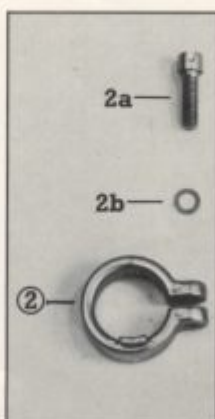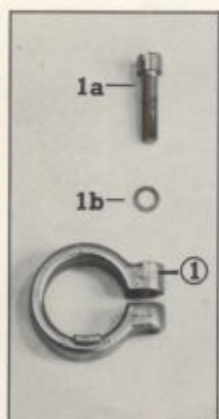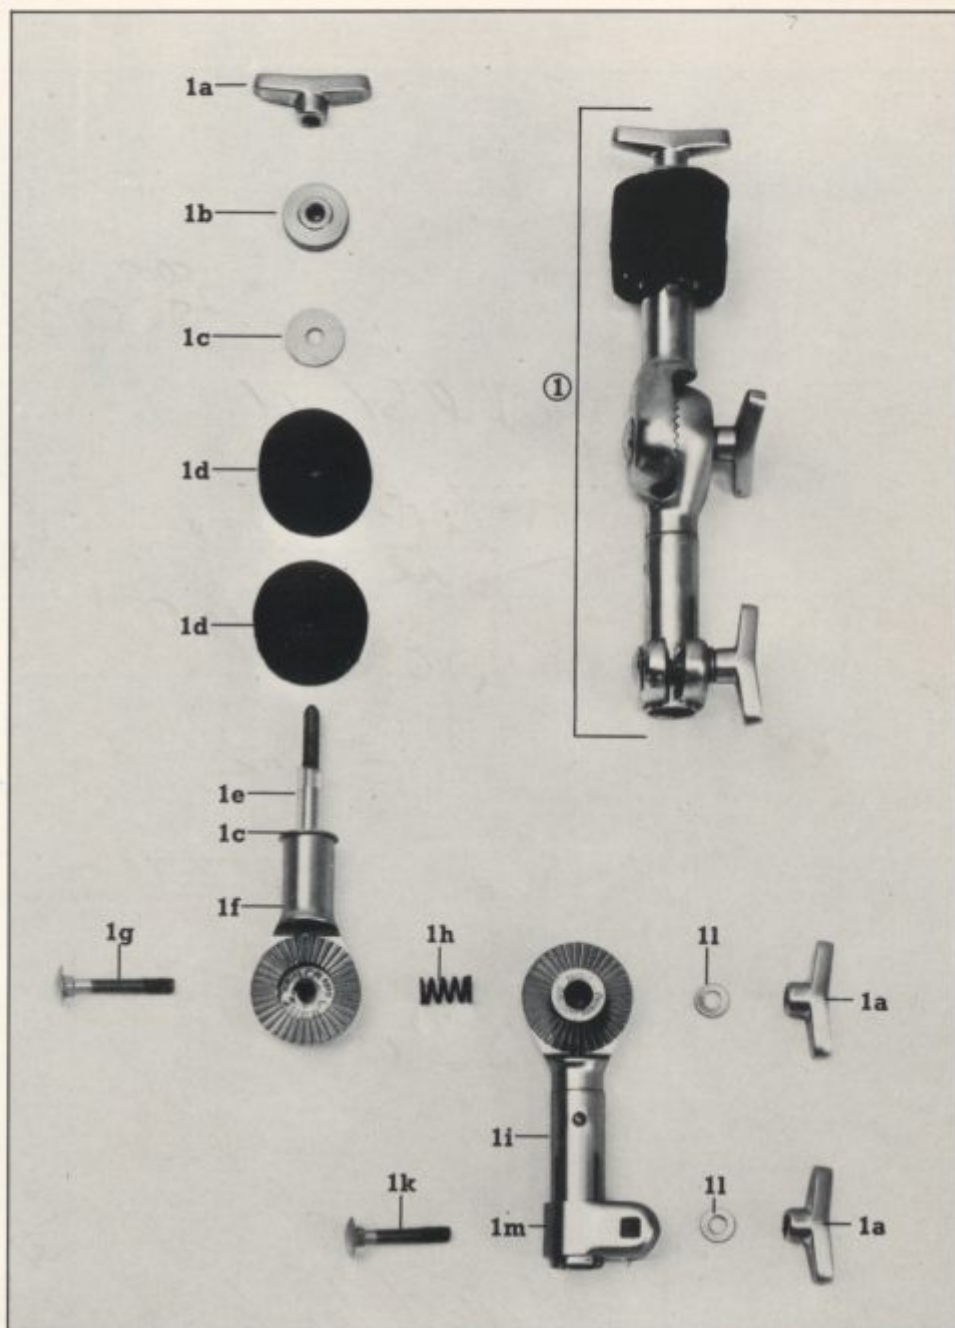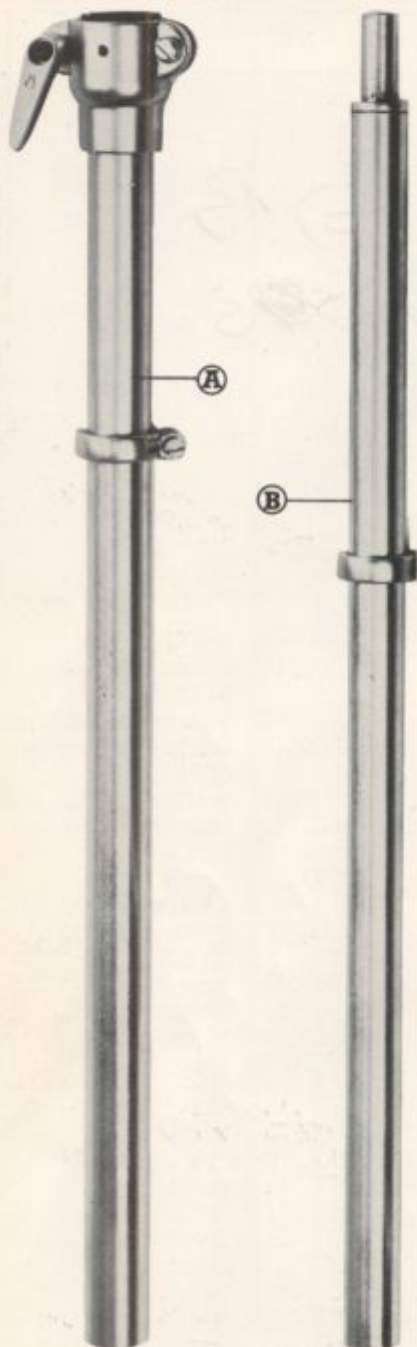


- ① 75001354 fix clamp 29 dia.
- 1a 80200253 slotted screw M6 x 25
- 1b 84500512 washer 6.5 dia.
- ② 75001454 fix clamp 26 dia.
- 2a 80200353 slotted screw M6 x 20
- 2b 84500512 washer 6.5 dia.


- ① 11600501 cymbal tilter, complete Z 5221
- 1a 80205254 wing nut M6, small
- 1b 84303054 knurled nut, M6 flat
- 1c 84500912 washer 6.5 dia.
- 1d 75801410 felt washer 10 dia.
- 1e 75805351 rubber hose 6 dia.
- 1f 75408554 top ratchet with threaded bolt M6 x 30
- 1g 84200854 flat round screw M6 x 40
- 1h 75701910 tension spring
- 1i 75001574 ratchet 19.5 dia.
- 1k 84200654 flat round screw M6 x 35
- 1l 84500412 washer 6.4 dia.
- 1m 75204754 clamping device
- A 75106159 middle tube, complete
- B 75106359 top tube, complete

Signature Series Cymbal Stand Z 5280


- ① 75000954 clamp 29 dia.
 1a 84206713 cylinder screw
 M 8x30
 1b 84400412 lock washer 8.2 dia.
 1c 84206613 flat headed screw
 M 6x22
 1d 84500412 washer 6.4 dia.
 1e 75702210 tension spring 12 dia.
 1f 84003810 notched bolt 4x8 dia.
 1g 75809400 clamp bushing 26 dia.
 1h 75001154 bow 29 dia.
 1i 84501112 washer 9.3 dia.
 1k 80205154 lever nut M 8
 1l 75901010 plug

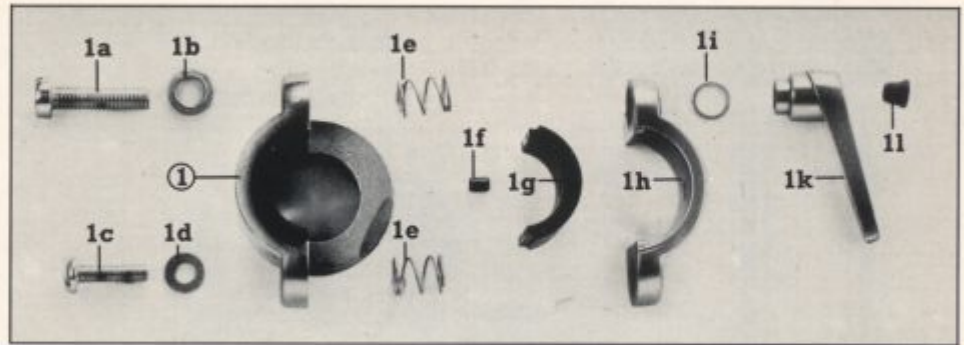

Phonic Plus Cymbal Stand Z 5270

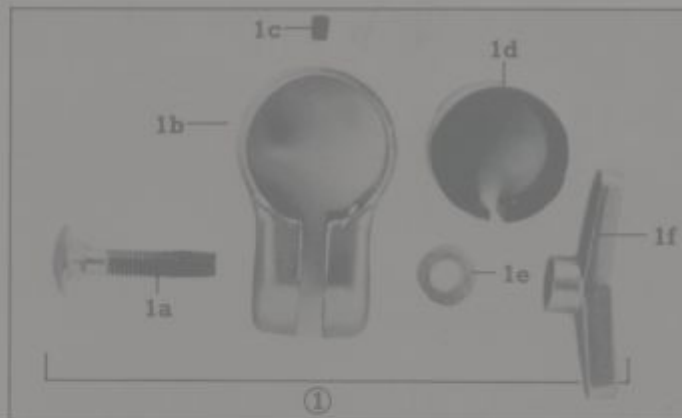

- ① 75005759 clamping device, complete
 1a 84207553 flat round screw
 M 8x45
 1b 75005753 clamping device
 37 dia.
 1c 84004210 notched pin
 1d 75901800 clamp bushing
 29 dia.
 1e 84500712 washer 8.4 dia.
 1f 80206853 wing nut M 8

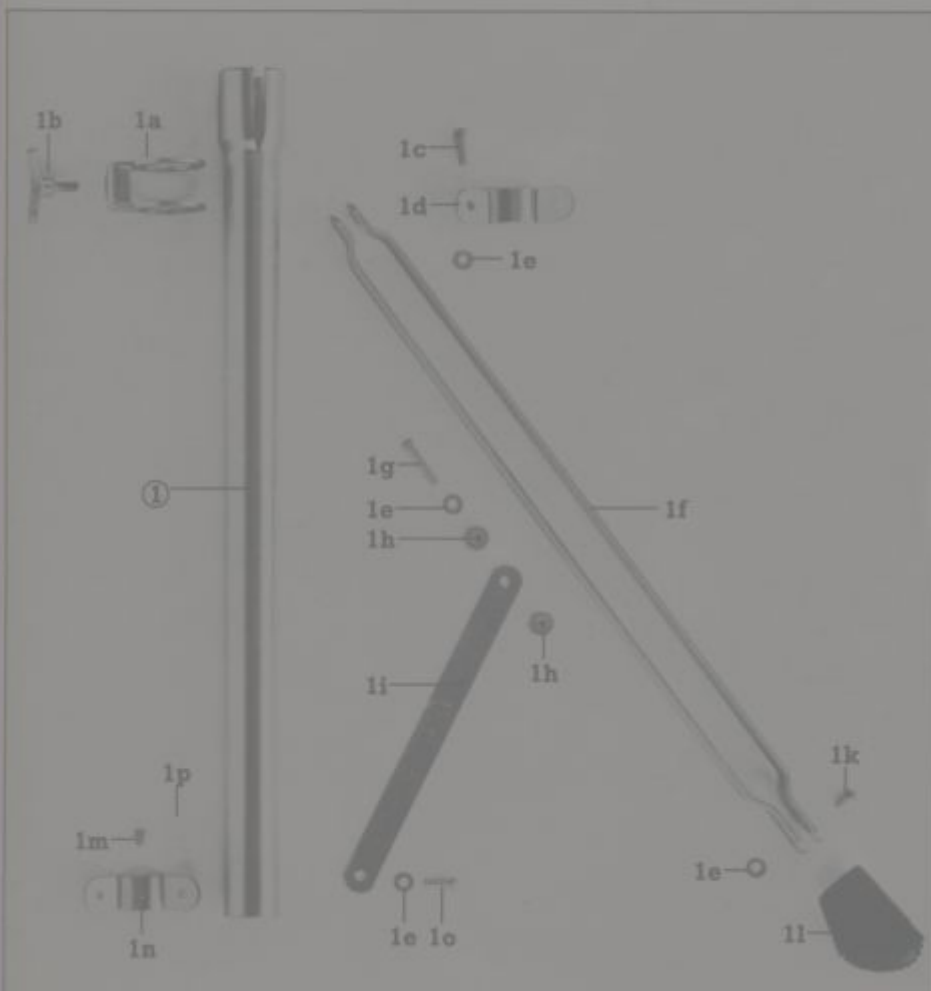

- ① 75107653 bottom tube 32 dia.
 1a 75208373 clamping device
 32.5 dia.
 1b 80206953 wing screw M 6x25
 1c 84004410 rivet 5 dia. x 18
 1d 75208173 bracket without hole
 1e 84500112 washer 5.3 dia.
 1f 75005873 long strut
 1g 84004510 rivet 5 dia. x 28
 1h 84503213 spacer
 1i 75006073 short strut
 1j 84004310 rivet 5 dia. x 11
 1k 75902000 rubber leg
 1l 84002910 rivet 4 dia.
 1m 75208073 bracket with hole
 1n 84002710 rivet 5 dia. x 16.5
 1o 84503410 washer 4.3 dia.
 1p 75207973 bracket without hole
 (not illustr.)


Phonic Plus Cymbal Stand Z 5270




- ① 75107853 top tube
26 dia. x 1.2 x 650
② 75107753 middle tube
26 dia. x 1.2 x 595



- ① 75005859 clamping device, complete
1a 84207553 flat round screw
M 8 x 45
1b 75008853 clamping device
34 dia.
1c 84004210 notched pin 4 dia.
1d 75901900 clamp bushing
26 dia.
1e 84500712 washer 8.4 dia.
1f 80206853 wing nut M 8
① 75408553 top ratchet
1a 80205253 wing nut M 6
1b 84303053 knurled nut M 6
1c 84500912 washer 6.5 dia.
1d 75801410 felt washer 10 dia.
1e 75808351 rubber hose 6 dia.
1f 84200853 flat round screw
M 6 x 40
1g 75701910 tension spring
10 dia.
1h 84500412 washer 6.4 dia.

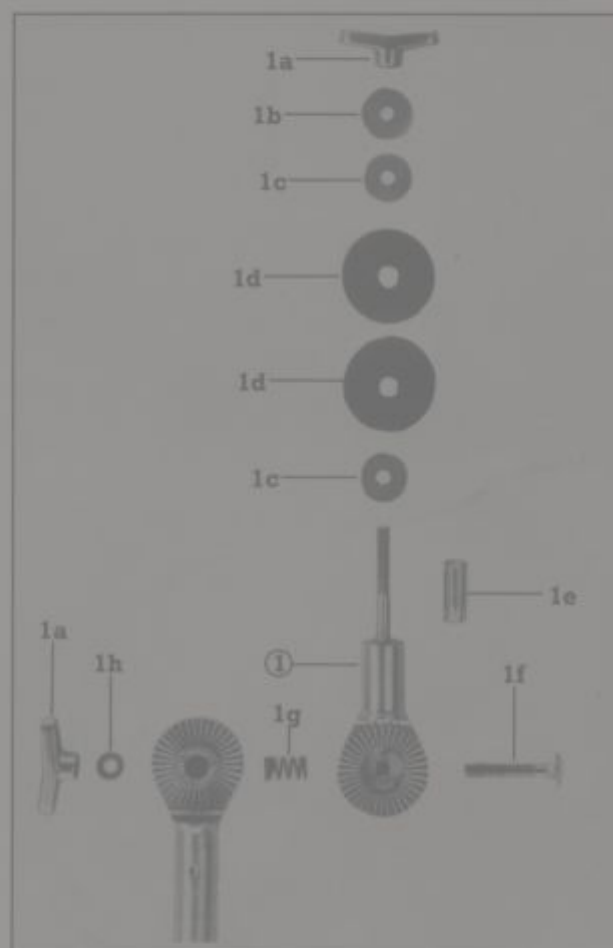


Cymbal Boom Arm Z 5273

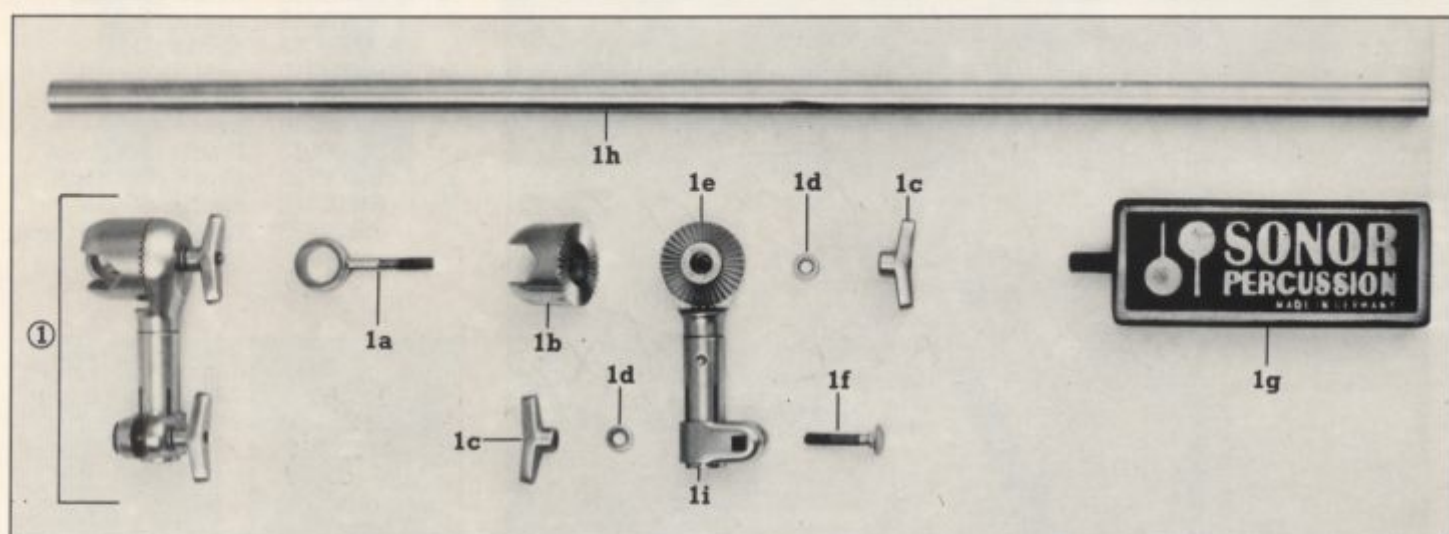


- ① 75409459 tilter, complete
1a 80204754 screw
M 6 x 52
1b 75409454 tilter
1c 80205254 wing nut M 6
1d 84500412 washer 6.4 dia.
1e 75001574 ratchet 19.5 dia.
1f 84200654 flat round screw
M 6 x 35
1g 75409855 counter weight
tube 16.5 dia.
1h 75105874 clamping device
19.5 dia.
1i 75204754

Double Cymbal Stand Z 5278

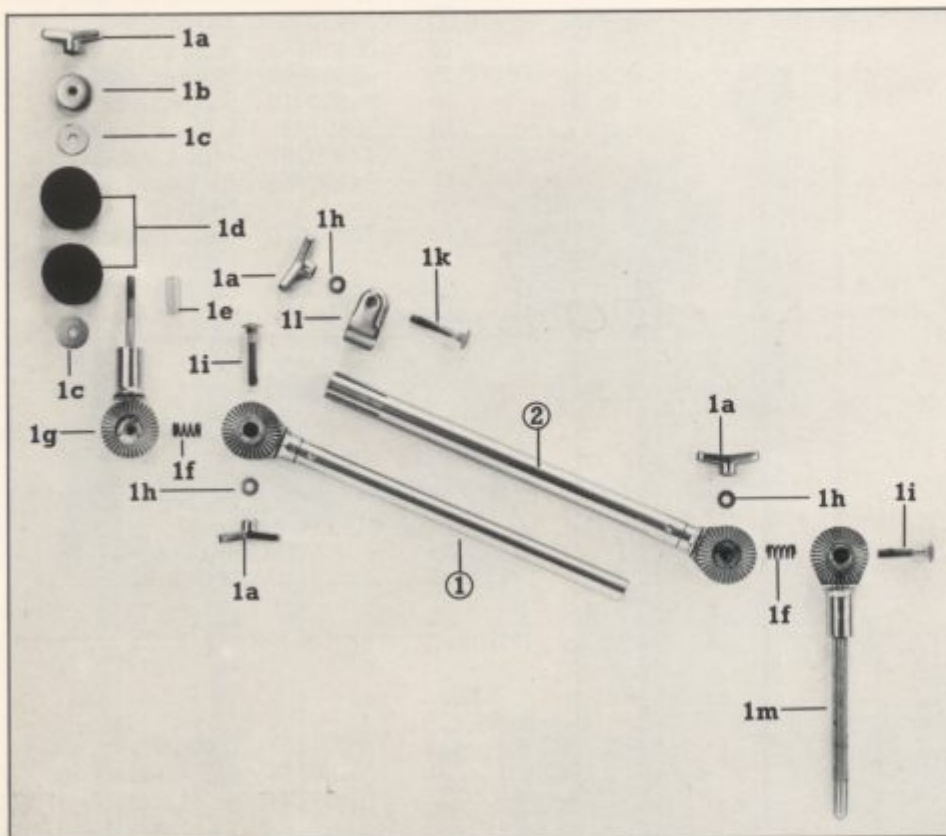


- ① 75104073 top tube with ratchet
- 1a 80205254 wing nut M6
- 1b 84303053 knurled nut M6
- 1c 84500912 washer 6.5 dia.
- 1d 75801410 felt washer 10 dia.
- 1e 75805351 rubber hose 6 dia.
- 1f 75701910 tension spring 10 dia.
- 1g 75408553 cymbal tilter with threaded bolt
- 1h 84500412 washer 6.4 dia.
- 1i 84200854 flat round screw M 6x40
- 1k 84200654 flat round screw M6 x 35
- 1l 75204754 clamping device 19.5 dia.
- 1m 75601773 ratched
- ② 75103973 bottom tube with ratchet

- ① 75604653 mounting plate
- 1a 75704212 tension spring 11 dia.
- 1b 75605254 mounting bracket 29 dia.
- 1c 80204953 lever nut M6GN100
- 1d 84500412 washer 6.4 dia.
- 1e 84202012 cylinder screw M6 x 40
- 1f 84400312 lock washer 6.1 dia.
- 1g 84301513 cap nut M6

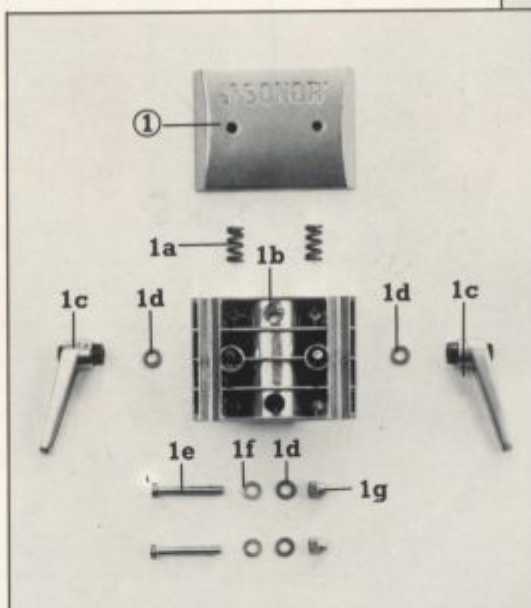


Base see Z 5270
on page 23.

- ① 75106259 tube with tom tom holder (without fix clamp)
- 1a 75106254 tube 29 dia.

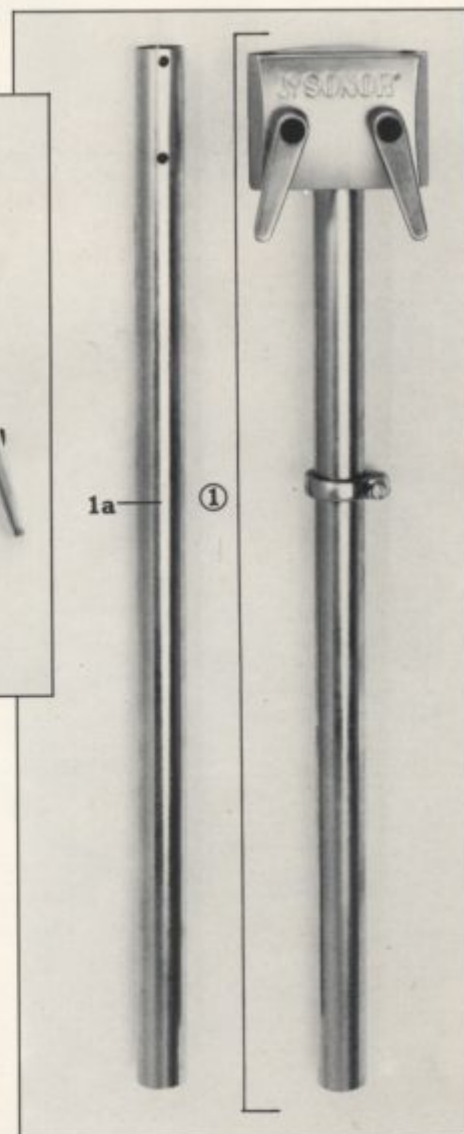


Signature Series Double Tom Stand HLZ 5285

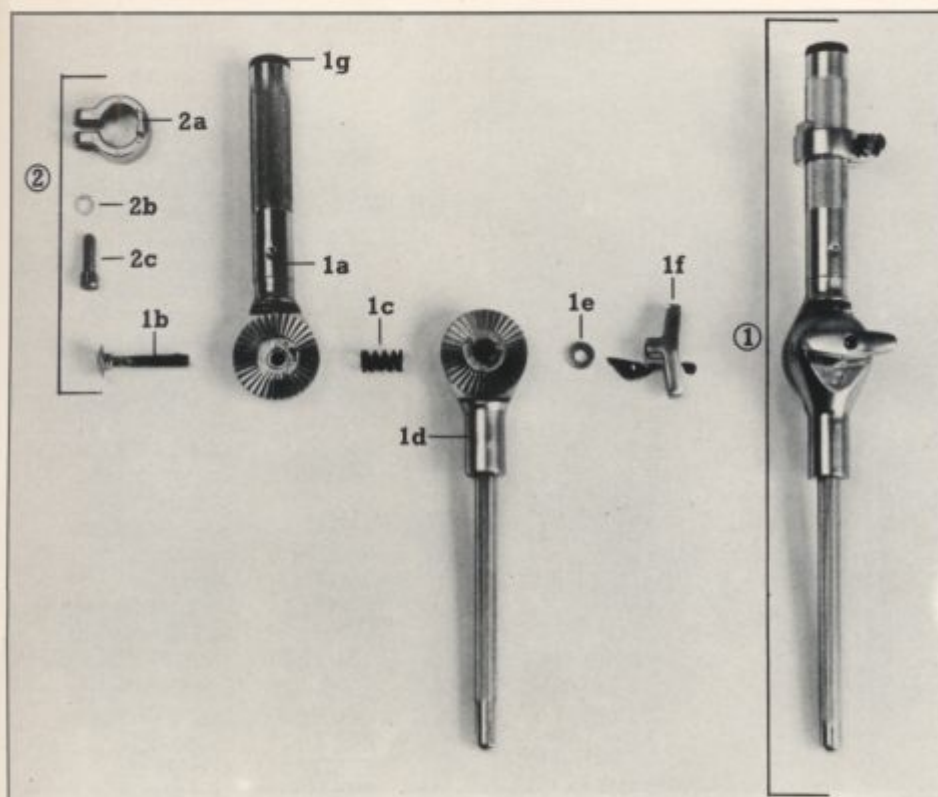

- ① 11606101 tom tom arm Z 5508 c
- 1a 75601873 tom tom arm with ratchet
- 1b 84200854 flat round screw M 6 x 40
- 1c 75701910 tension spring 10 dia.
- 1d 75601773 ratchet 10 dia.
- 1e 84500412 washer 6.4 dia.
- 1f 80205254 wing nut M 6
- ② 75003854 fix clamp, right without screw
- 75003859 fix clamp, right, complete
- 1g 75809210 plug A 170
- ② 75003959 fix clamp, complete
- 2a 75003954 fix clamp, without screw
- 2b 84500512 washer 6.5 dia.
- 2c 80200353 slotted screw M6 x 20


- ① 75604653 mounting plate
- 1a 75704212 tension spring 11 dia.
- 1b 75605254 mounting bracket 29 dia.
- 1c 80204953 lever nut M6GN100
- 1d 84500412 washer 6.4 dia.
- 1e 84202012 cylinder screw M6 x 40
- 1f 84400312 lock washer 6.1 dia.
- 1g 84301513 cap nut M6

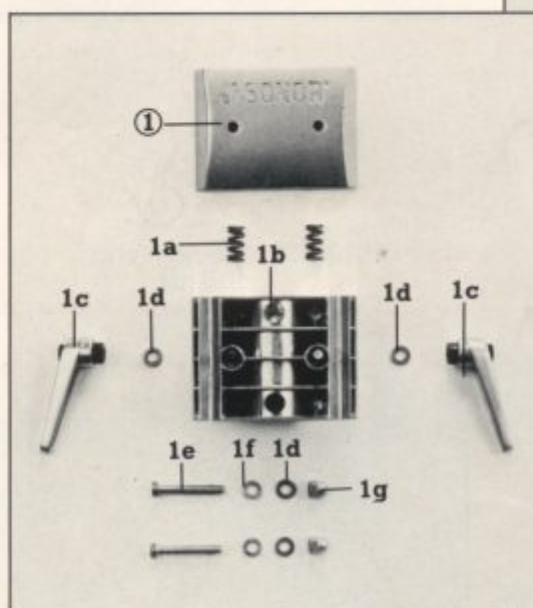


Base see HLZ 5280 on page 21.

Phonic Plus Double Tom stand without fix-clamp. For base see Z 5270 on page 24

- ① 75106259 tube with tom tom holder
- 1a 75106254 tube 29 dia.
- 1b 75001359 fix clamp 29 dia., complete

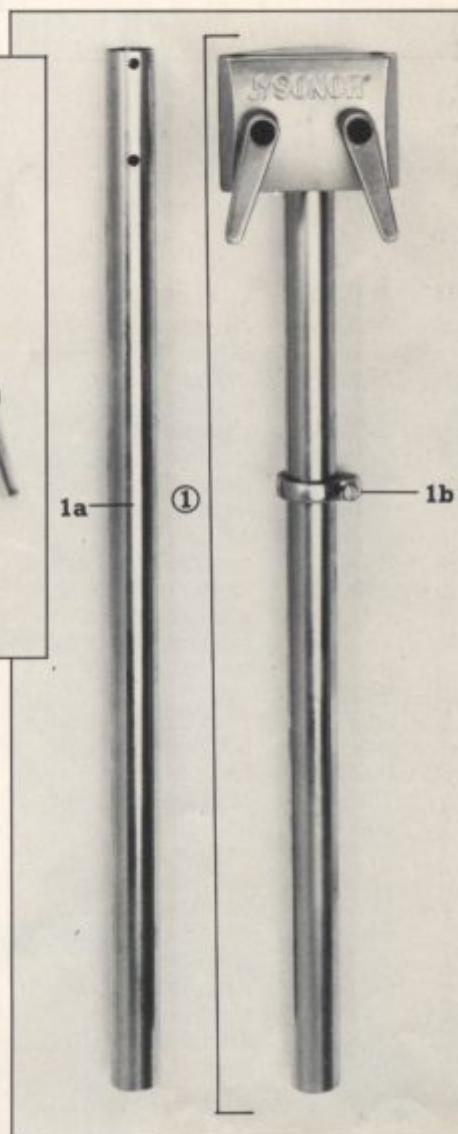

Signature Series Snare Drum Stand HLZ 5580

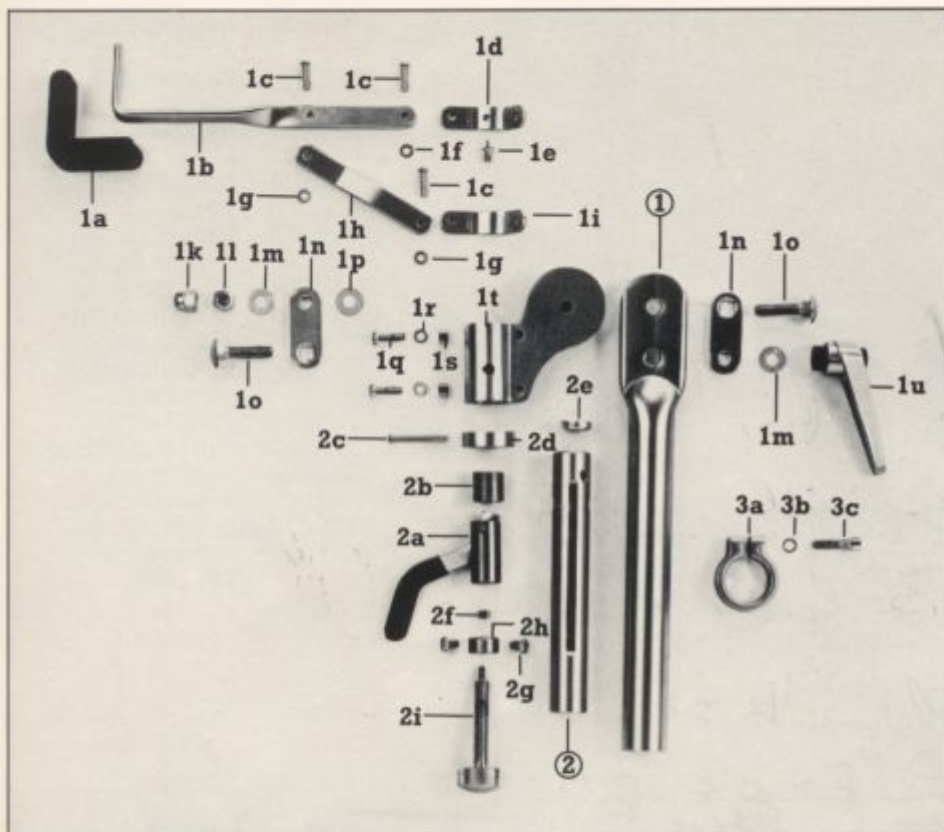


- | | | |
|----|----------|--------------------------|
| ① | 75106654 | tube 29 dia. |
| 1a | 75809700 | rubber sleeve |
| 1b | 75209174 | holder arm |
| 1c | 84709310 | rivet 4 dia.x 16.5 |
| 1d | 75205274 | bracket with hole |
| 1e | 84703312 | blind rivet 4 dia. |
| 1f | 84502412 | washer 4.3 dia. |
| 1g | 84500312 | washer 4.3 dia. |
| 1h | 75209274 | strut |
| 1i | 75205074 | bracket without hole |
| 1k | 84304913 | cap nut M 8 |
| 1l | 84300610 | hex nut M 8 |
| 1m | 84500712 | washer 8.4 dia. |
| 1n | 75207174 | clamp strap |
| 1o | 84205854 | flat round screw M 8x35 |
| 1p | 84502710 | washer 8.4 dia. |
| 1q | 84105813 | flat top screw M 5x18 |
| 1r | 84500112 | washer 5.3 dia. |
| 1s | 84301913 | cap nut M 5 |
| 1t | 75005474 | clamp |
| 1u | 80205454 | lever nut 22xM 8 GN 100 |
| ② | 75106874 | tube 24 dia.x2x165 |
| 2a | 75209379 | lever assembly |
| 2b | 75501900 | bolt 19.5 dia. |
| 2c | 84700112 | rivet 4 dia. |
| 2d | 75502354 | ring 34 dia. |
| 2e | 75404502 | cap 20 dia. |
| 2f | 84301713 | cap nut M4 |
| 2g | 84102012 | liko screw M5 x 8 |
| 2h | 75502000 | tension nut |
| 2i | 80205354 | knurled screw M 10x75/93 |


- | | | |
|----|----------|----------------------|
| ③ | 75001354 | fix clamp 29 dia. |
| 3a | 84500512 | washer 6.5 dia. |
| 3c | 80200353 | slotted screw M 6x20 |

- | | | |
|----|----------|-------------------------|
| ① | 75106559 | tube, complete |
| 1a | 84206613 | flat top screw M6 x 22 |
| 1b | 84206713 | cylinder screw M8 x 30 |
| 1c | 84500412 | washer 6.4 dia. |
| 1d | 84400412 | lock washer 8.2 dia. |
| 1e | 75001059 | bracket, complete |
| 1f | 75702210 | tension spring 12 dia. |
| 1g | 84003810 | tension bolt 4 dia.x8 |
| 1h | 75809300 | clamp cup 29 dia. |
| 1i | 84500112 | washer 5.3 dia. |
| 1k | 75208274 | bracket with hole |
| 1l | 84503410 | washer 4.3 dia. |
| 1m | 84002910 | rivet 4 dia.x8 |
| 1n | 84002610 | rivet 5 dia.x21.5 |
| 1o | 84501112 | washer 9.3 dia. |
| 1p | 80205154 | lever nut M 8 |
| 1q | 75901010 | plug for lever nut |
| | 80205159 | lever nut M 8 with plug |
| 1r | 75208674 | long strut |
| 1s | 75208074 | bracket with hole |
| 1t | 84004810 | rivet 5 dia.x 15.5 |
| 1u | 75005574 | short strut |
| 1v | 84003910 | rivet 5 dia. x 12 |
| 1w | 75005674 | short strut |
| 1x | 84003510 | rivet 5 dia. x 19.5 |
| ② | 75208474 | strut |
| 2a | 75509554 | tube |


- | | | |
|----|----------|--------------------------|
| 2b | 75704610 | tension spring 10.5 dia. |
| 2c | 75809500 | washer 10.1 dia. |
| 2d | 84503310 | disc |
| 2e | 75809600 | rubber foot |

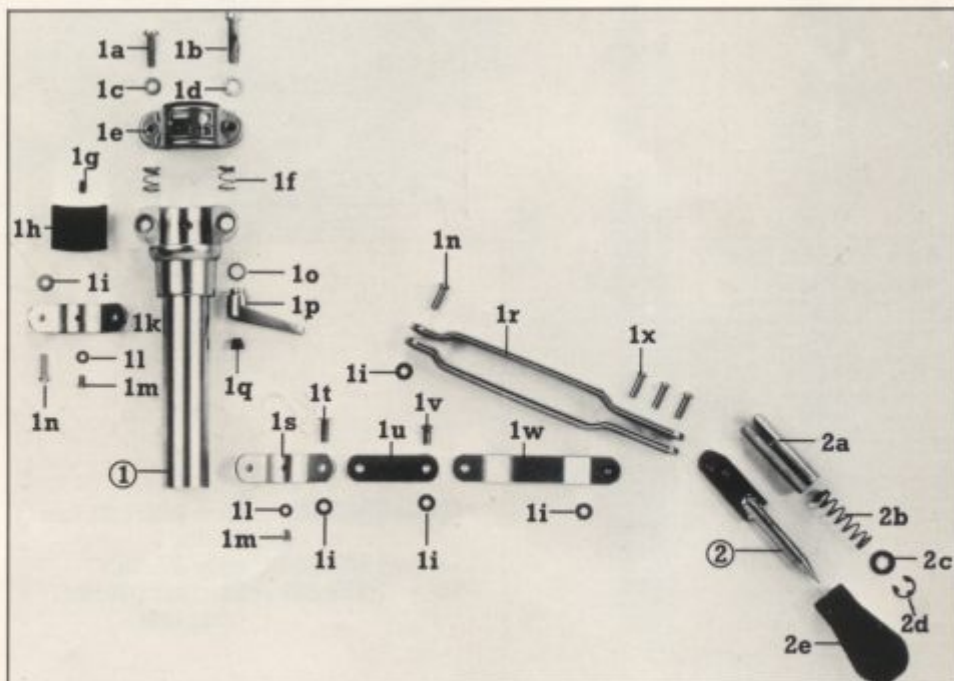

Tom Tom Holders, Extension tube

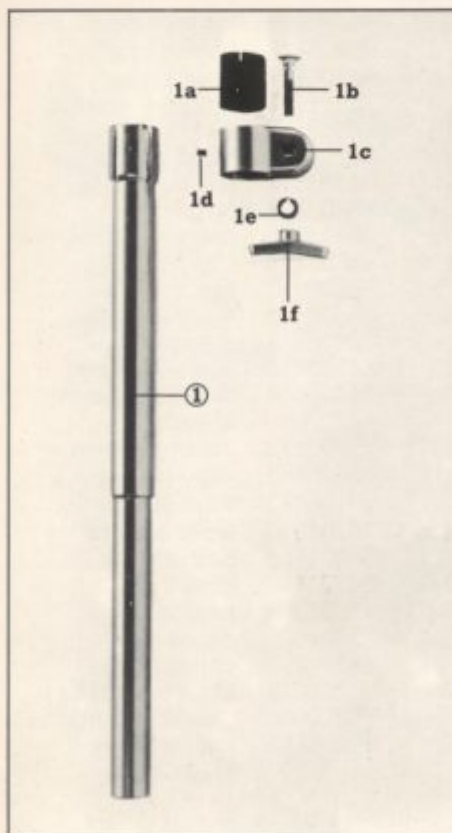


- ① 75108173 extension tube
32 dia.
1a 75901800 clamp bushing
29 dia.
1b 84207553 flat round screw
M8x45
1c 75005753 clamp 37 dia.
1d 84004210 notched pin 4 dia.
1e 84500712 washer 8.4 dia.
1f 80206853 wing nut M8

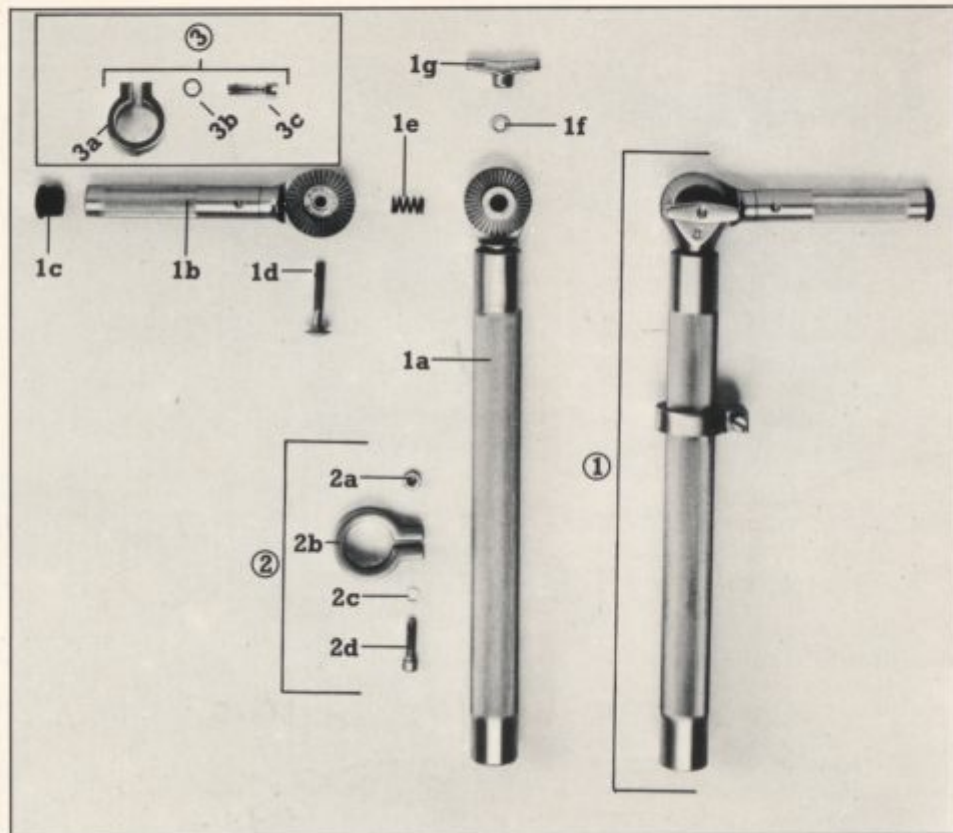


- ① 11603401 single tom tom
holder,
complete Z 5511b
bottom tube 28 dia.
with ratchet
1a 75604973 tom tom arm with
ratchet
1b 75601873 plug A170
1c 75809210 flat round screw
M6x40
1d 84200854 tension spring
1e 75701910

- 1f 84500412 washer 6.4 dia.
1g 80205254 wing nut M6
② 75604359 fix clamp 28 dia.
complete
2a 84300512 hex nut M6
2b 75604354 fix clamp 28 dia.
without screw
2c 84500512 washer 6.5 dia.
2d 80200253 slotted screw
M6x25

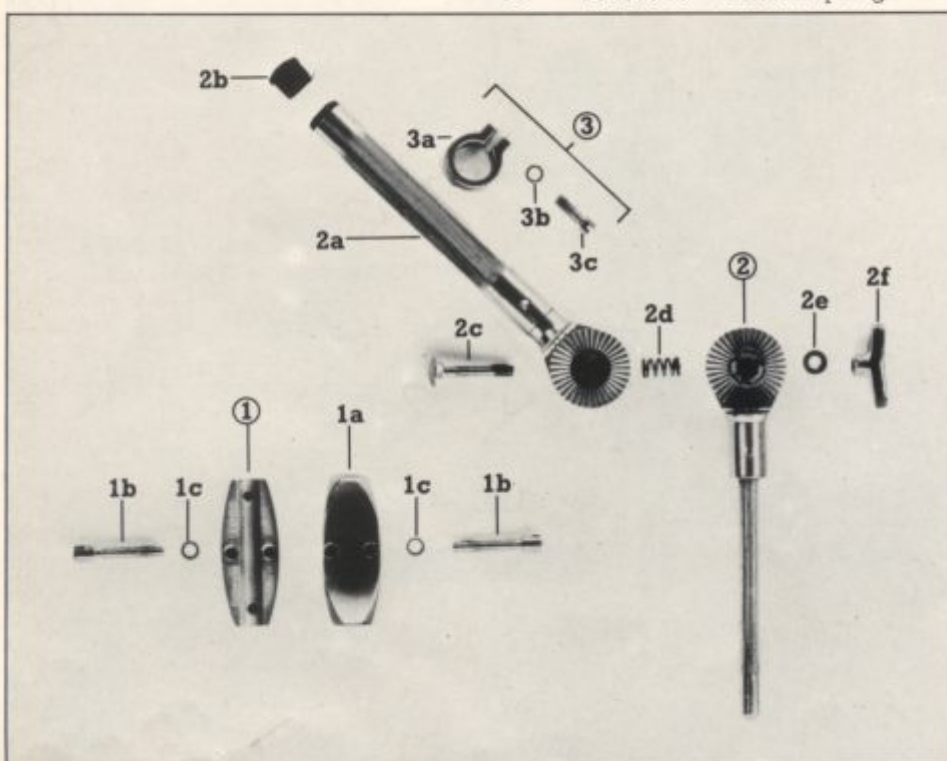

- ① 74102053 prism lug, bottom
1a 74101154 prism lug, top
1b 80100153 slotted screw
1/4"x35
1c 84500512 washer 6.5 dia.
② 75601773 ratchet
2a 75601873 ratchet
2b 75809210 plug A 170
2c 84200854 flat round screw M 6x40
2d 75701910 tension spring
10 dia.
2e 84500412 washer 6.4 dia.
2f 80205254 wing nut M 6
③ 75003959 fix clamp 19 dia.,
left, complete
3a 75003954 fix clamp, left
(without screw)
3b 84500512 washer 6.5 dia.
3c 80200353 slotted screw
M 6x20

Tom Tom Holders

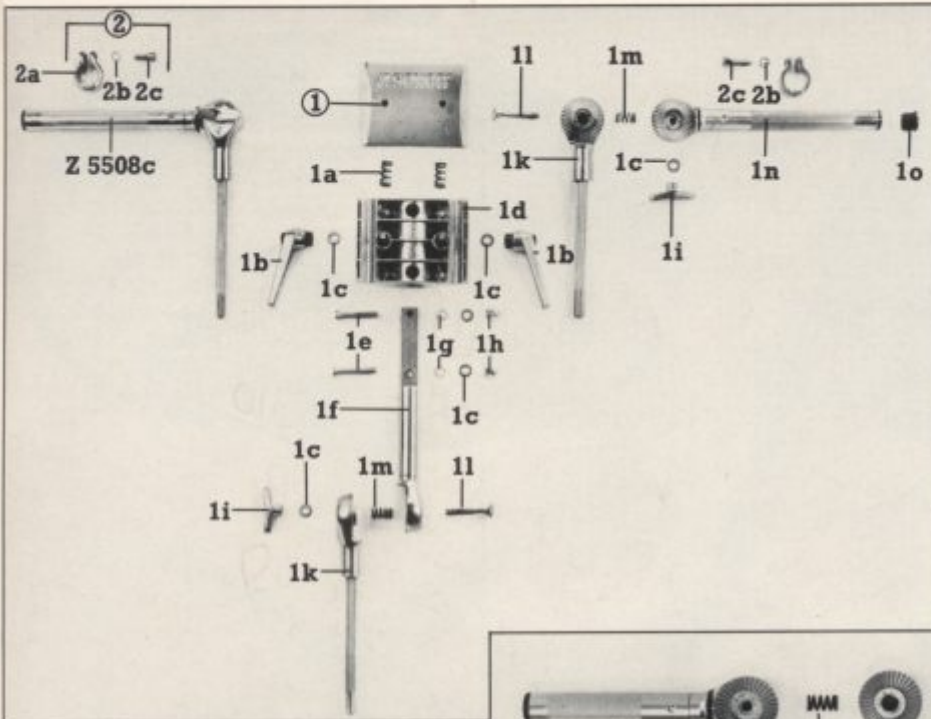


Z 5518b

①	75604653	mounting plate
1a	75704212	tension spring 11 dia.
1b	80204953	lever nut M6GN100
1c	84500412	washer 6.4 dia.
1d	75604553	mounting bracket 19.5 dia.
1e	84206312	cylinder screw M6 x 35
1f	75605173	tom tom arm with ratchet
1g	84400312	lock washer 6.1 dia.
1h	84301513	cap nut M6
1i	80205254	wing nut M6
1k	75601773	ratchet
1l	84200854	flat round screw M6 x 40
1m	75701910	tension spring 10 dia.
1n	75601873	tom rom arm with ratchet

②	75003959	fix clamp, complete
2a	75003954	fix clamp, (without screw)
2b	84500512	washer 6.5 dia.
2c	80200353	slotted screw M6 x 20

Z 5513b

①	75604653	mounting plate
1a	75601873	tom rom arm with ratchet
1b	84200854	flat round screw M6 x 40
1c	75701910	tension spring 10 dia.
1d	75601773	ratchet
1e	84500412	washer 6.4 dia.
1f	80205254	wing nut M6
1g	75704212	tension spring 11 dia.
1h	75604453	mounting bracket 28 dia.
1i	80204953	lever nut M6GN100
1k	84202012	cylinder screw M6 x 40
1l	84400312	lock washer 6.1 dia.
1m	84301513	cap nut M6
1n	75605073	bottom tube 28 dia.
1o	75809210	plug A170
②	75003959	fix clamp, left, complete
	75003859	fix clamp, right, complete
2a	80200353	slotted screw M6 x 20
2b	84500512	washer 6.5 dia.
2c	75003954	fix clamp, left, (without screw)
③	75604359	fix clamp 28 dia., complete
3a	84300512	hex nut M6
3b	75604354	fix clamp 28 dia.
3c	84500512	washer 6.5 dia.
3d	80200253	slotted screw M6 x 25

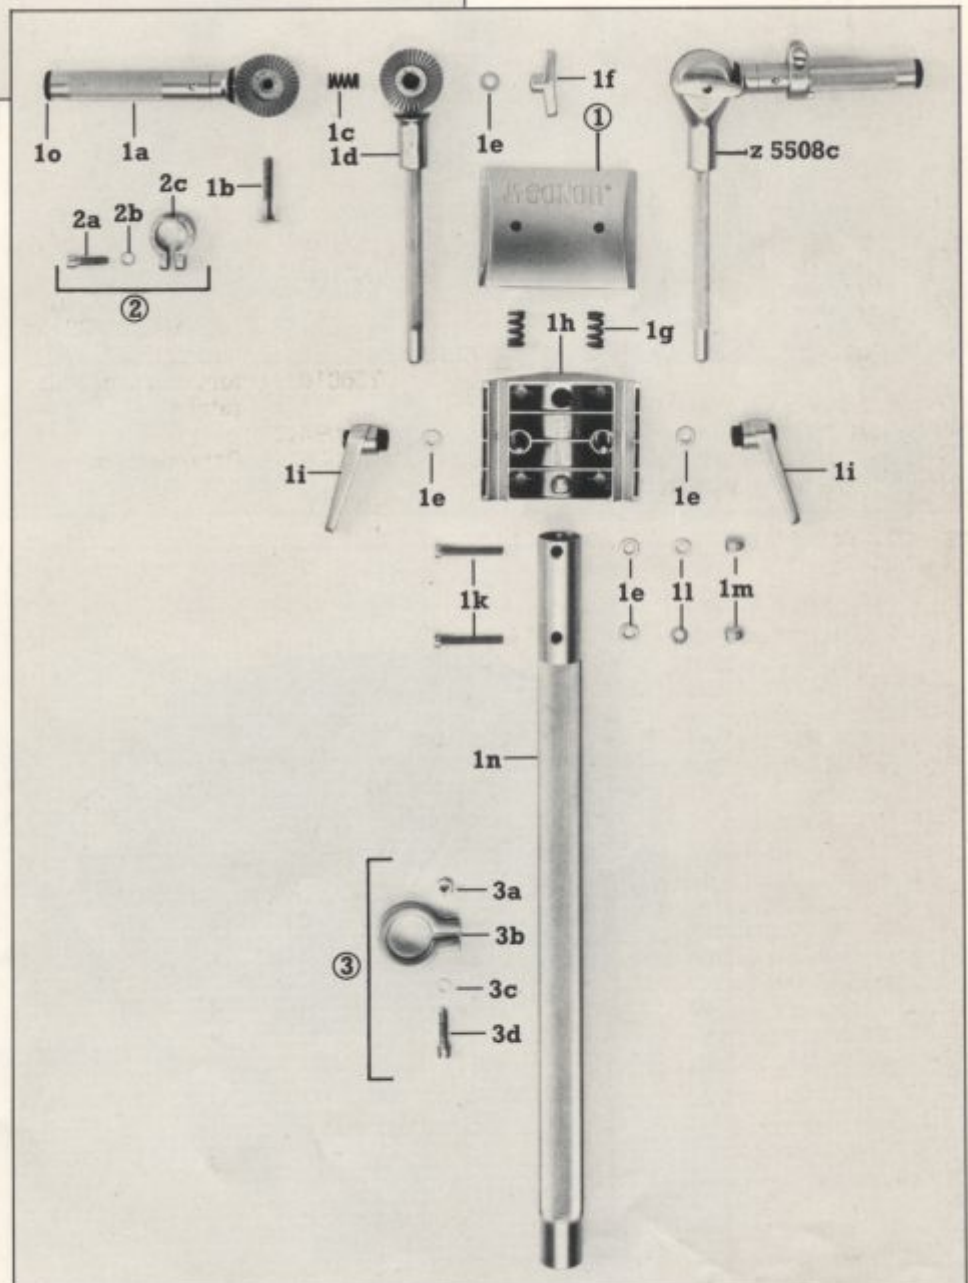

Miscellaneous Parts


Signature Series Badges, complete with screws and nuts

- 80605959 badge for stands and bass drum pedal
- 80606059 badge for snare drums and tom toms
- 80606159 badge for bass drums and floor toms



Phonic/Phonic Plus Badges, complete with rivet

- 80605159 badge "Genuine Rosewood Veneer"
- 80605259 badge "Genuine Oak Veneer"
- 80605359 badge "Genuine Mahogany Veneer"
- 80605459 badge "9 Ply Beechwood Shell"
- 80605559 badge for snare drums
- 80605859 badge "Since 1875"

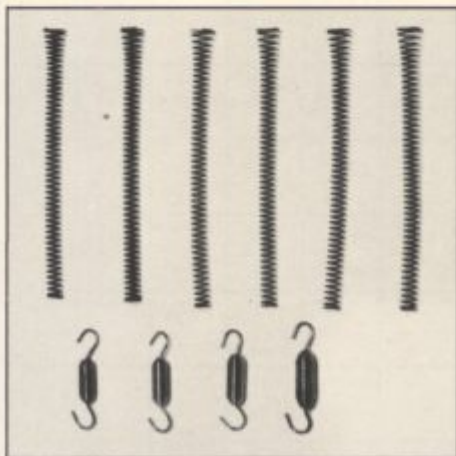

Hi Hat Tension Springs

- 75705810 Signature Series tension spring 0.8
- 75702510 tension spring 1.00
- 75702410 tension spring 1.10
- 75702610 tension spring 1.05
- 75702910 tension spring 1.15
- 75703010 tension spring 1.20
- 75703110 tension spring 1.25
- 75703210 tension spring 1.30
- 14601101 Z 9500 set of 6 springs, with lubricant
- 14601301 Z 9502 set of 2 springs, with lubricant

Bass Drum Pedal Tension Springs

- 75700212 tension spring 1.10
- 75700312 tension spring 1.25
- 75700412 tension spring 1.50
- 75700512 tension spring 1.75
- 14601201 Z 9501 set of 3 springs, with drum key

Spin Key

- 80501354 SONOR spin key

Bass Felt Strip

- 75806351 felt strip for bass drum, 2 meters

Snare Cord

- 74704151 snare cord, 2 meters



Lubricant

- 88401620 lubricant

SONOR Wood Polish

- 88407200 SONOR wood polish

